

Special Accessibility Features

- Auto handsfree
 - Speed dial memories
 - One press calling
 - Outgoing call restrict
- See **pages 19 to 21** for details

Burnside P230

desktop mobile phone

user guide



Contents

2 Introduction

2 Welcome

3 Setting up

3 Install your SIM card

4 Attach the handset cable

4 Unlock the transit switch

5 Attach the antenna and power adapter

6 Using your phone

6 Switching on

6 Switching off

7 The standby screen

8 Making and receiving calls

10 Managing more than one call

12 Menu options

13 Menu options layout

14 Phonebook

19 Accessibility features

19 Speed dial memory buttons

20 Auto Handsfree and one press calling

21 Restrict outgoing calls

22 Messages

26 Call register

28 Divert

30 Tones

31 Settings

32 General settings

32 Edit banner

33 Call settings

34 Security settings

34 Date and time settings

35 Status

35 Restore

36 Options


36 Magnetic mount antenna and Wall bracket

37 Important safety information

Introduction

Welcome

Thank you for choosing the P230 desktop mobile phone from Burnside Telecom. Combining the ease of use of a landline phone with the flexibility of a mobile phone, your phone provides landline simplicity almost anywhere.

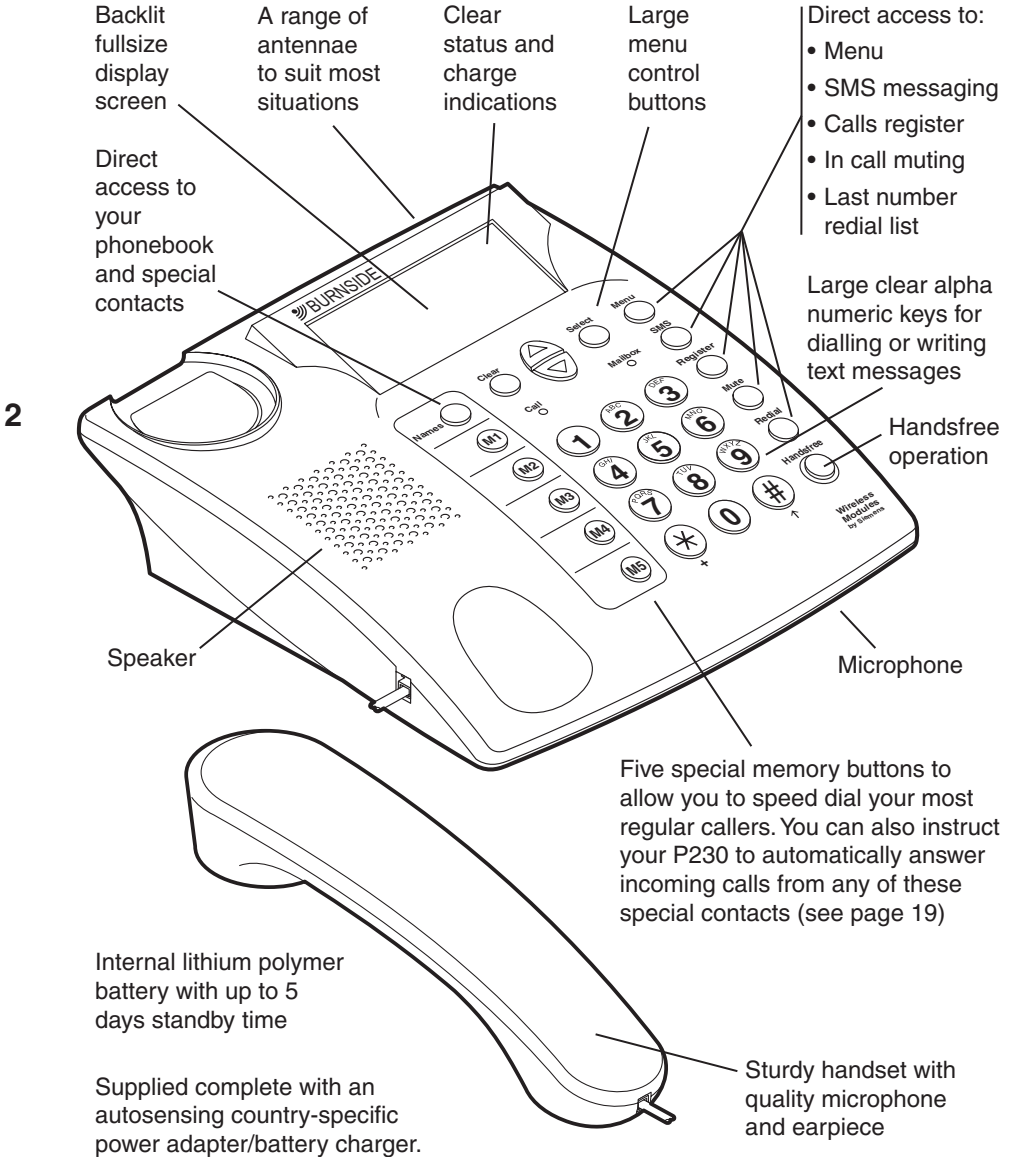

Setting up


Install your SIM card

Your SIM (Subscriber Identity Module) card is your identity on the mobile phone network. It can also store your phonebook contact details.


IMPORTANT: Without a working SIM card, your phone can only make emergency calls using the 112 code (subject to network availability).

Note: When handling your SIM card, limit your movements to reduce static electricity and avoid touching the gold contacts.

- 1 Ensure that the phone is switched off. On the rear panel of the phone, carefully swing open the SIM slot door.

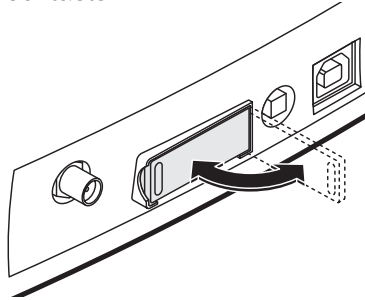


- 2 Orientate your SIM card with its contacts facing downwards and the notched corner facing towards the slot.

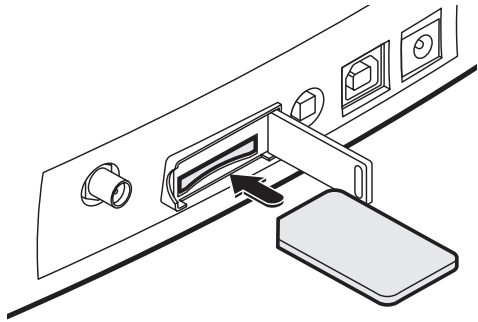


- 3 Push the SIM card into the slot until it clicks into place. Close the door.

Note: To remove the SIM card, press it inwards to release and partially eject it. Then slide it out of the slot.

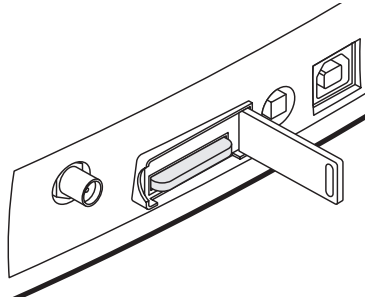

Attach the handset cable

- 1 Locate the handset and the supplied cable.
- 2 Connect one end of the cable to the socket at the base of the handset and the other end to the socket in the left side of the phone body. Each connector will click into place once inserted correctly.

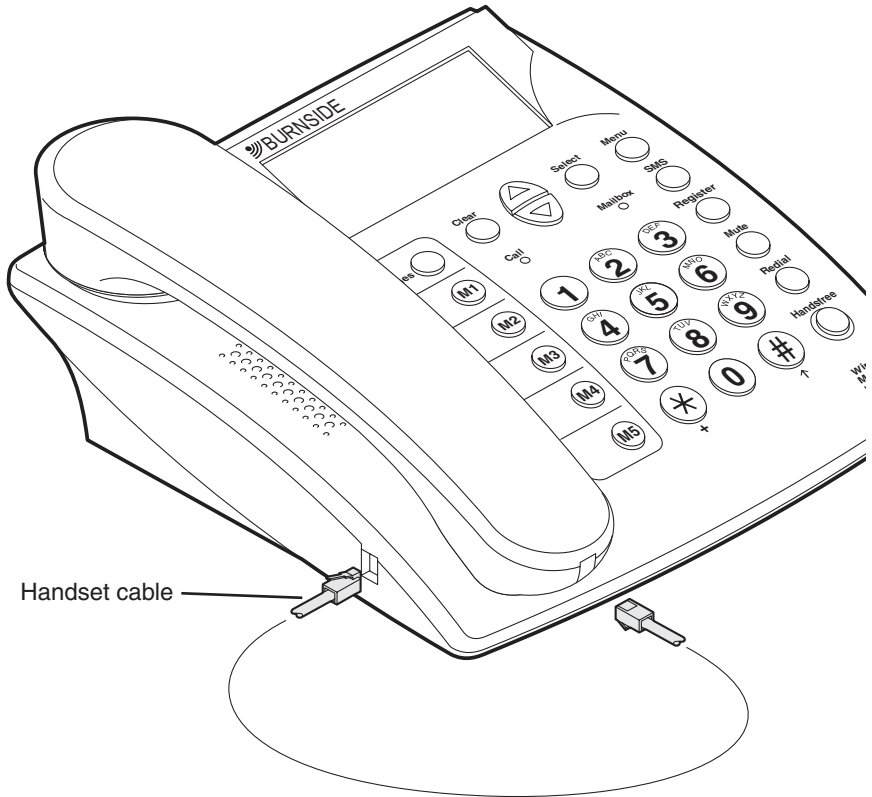


4

Unlock the transit switch

When shipped, the phone is locked for transit to prevent it from switching on accidentally. You need to unlock the phone before it will operate.

- 1 On the underside of the phone, locate the recessed switch near where the handset cable attaches.
- 2 Slide the switch towards the rear of the phone unit.
The phone will not switch on at this stage.

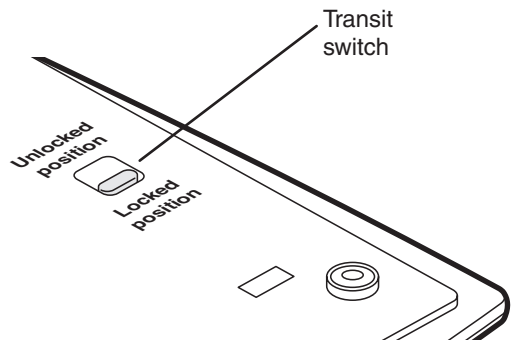


Attach the antenna

The supplied stub antenna should be mounted directly onto the rear of the phone.

- 1 Ensure that the phone is switched off.
- 2 Align the stub antenna with the circular connector on the far left of the rear panel.
- 3 Attach the antenna and twist the connector collar clockwise until it is finger-tight - do not overtighten.
- 4 In use, the antenna should always be vertical. The antenna has a hinge so that you can position it correctly.


Note: You can use the signal strength reading within the Status screen to help determine the optimal phone/antenna position. - see page 35.

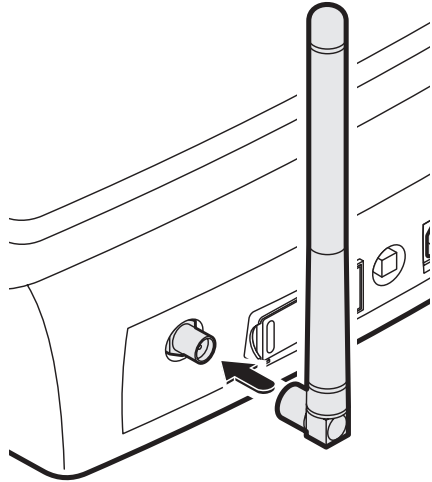


5

Attach the power adapter

- 1 Attach the connector from the power adapter to the socket on the far right of the rear panel.
- 2 Plug the power adapter main body into a nearby mains outlet and ensure that the outlet is switched on.

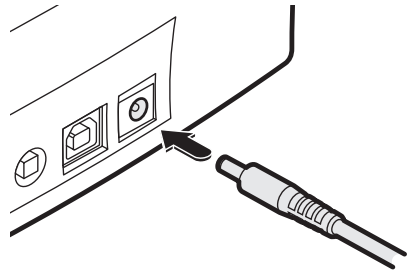

The USB connector is used to provide access to the P230s wireless modem for Internet access, PC fax, firmware updates, diagnostics and SMS gateway using an attached computer. Please contact Burnside Technical Support for details.

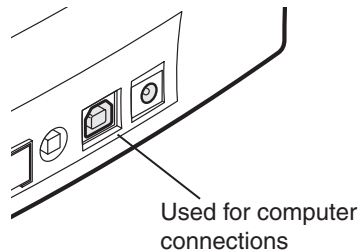

Using your phone


Switching on

- 1 Ensure that a valid SIM card is installed and that either:
 - The power adapter is attached (as discussed in the previous section), or
 - The internal battery has been charged for at least two hours (or until the display shows 'charged') before it is used without mains connection.

Whenever power is applied, the internal battery will be charged automatically.

- 2 On the rear panel, press and hold the red button for roughly one second, then release.

- The screen should illuminate and display an initial message while the phone prepares itself for operation.
- If the SIM card is configured to use a PIN (Personal Identification Number) code, you will be asked to enter it. Enter the appropriate four digit code and press the **Select** button.

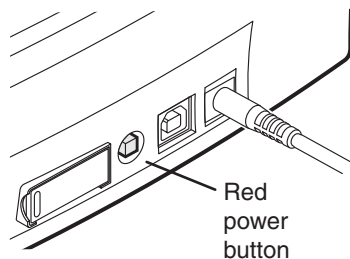

6

Note: take care when entering a PIN code as three successive incorrect tries will cause the SIM card to be blocked, requiring a special unblocking code from your service provider.

- If there is no available network service in the vicinity, the display will show **Searching...** If this condition continues, try a different location for the phone or antenna.
- 3 The standby screen will be displayed (see opposite).

Switching off

- 1 Press and hold the red button until the display goes blank.

Notes:


During normal use, the phone should only be switched on and off using the red button. Use the transit switch only after the unit has been turned off.

If the transit switch is inadvertently moved to the locked position, the phone will immediately shut off or enter a charging state if the power adapter is connected.

The standby screen


When there is no call in progress and the menu is not being used, the phone will show the standby screen. The standby screen provides indications of the signal strength, battery charge status as well as the time and date.

The ordinary standby screen will display the network name in addition to any relevant status icons.

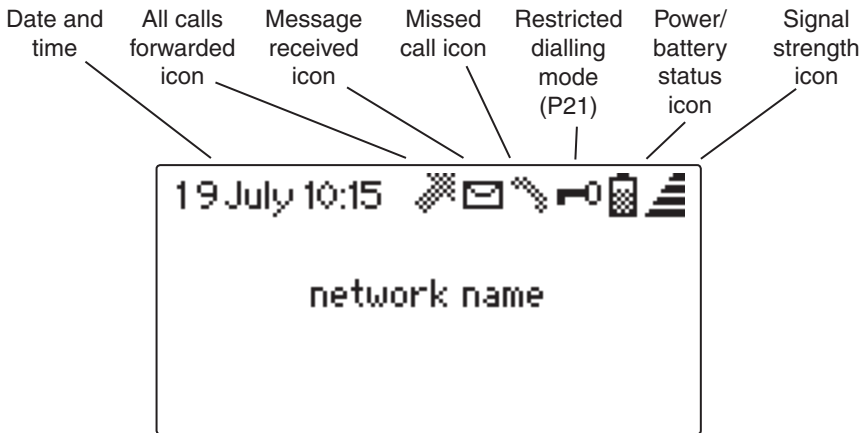


Standby screen showing all status items and the network name

You also have the option to display either a large digit clock or a banner. See the *Settings* section for details on enabling the 'big clock' or 'banner' and also for information about editing the banner text.

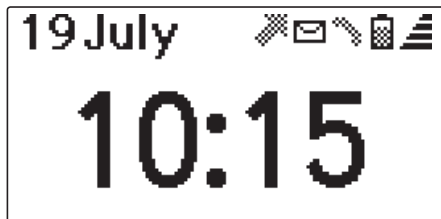

Standby screen with big clock option enabled (see Settings section)

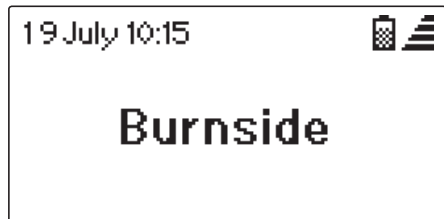

Standby screen with editable banner option enabled (see Settings section)

Note: The big clock or banner will be temporarily removed from display if special information must be shown, such as "SMS inbox full, messages queued" or the phone is searching for a network connection.


Making and receiving calls

Although your phone uses mobile communication technology, much effort has been made to make basic telephone functions work like a high quality landline phone, but with the added benefit of many mobile phone features.

*Important: If the network connection shows **Searching...** you will not be able to successfully make or receive calls. There are many factors that can affect network availability and for this reason, the phone should not be considered as a fail-safe resource for making emergency calls.*

To make a call by dialling

Before making a call, ensure that the standby screen is displayed:

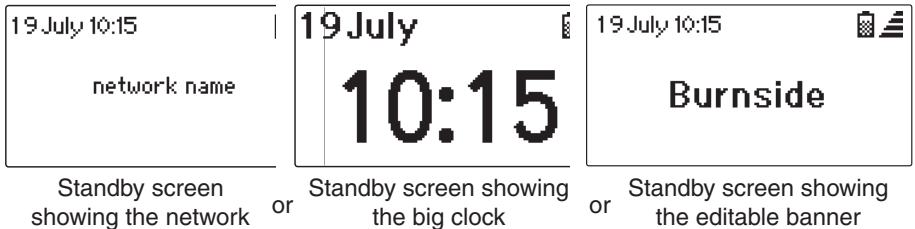

Whether you are using the handset or the handsfree speaker, you can choose to either:

8

- Dial first, then pick up the handset (or press the **Handsfree** button),
or
- Pick up the handset (or press the **Handsfree** button) and then dial.

When dialling:

- Remember that this is a mobile phone, you must enter the full phone number, including area code, even if the contact is in your area.
- To erase the last entered digit: Press and release the **Clear** button.
- To erase all entered digits: Press and hold the **Clear** button.
- To enter an international number, press the ***** button twice (a **+** symbol will be displayed to represent the international dialling code - You may also be able use your normal international prefix depending on your SIM and location.). Then enter the country code (two or more digits) and the remaining number (with the initial zero of the area code removed).
- If you picked up the handset/pressed the Handsfree button first, the phone will begin placing the call a short time after the last digit is pressed. The time delay (4 seconds as standard) between entering the last digit and placing the call is determined by the *Call delay* setting - see page 32.

To redial a previously called number

- 1 From the standby screen, press the **Redial** button to display a list of previously dialled numbers.
- 2 Use the ▲ or ▼ buttons to highlight the required number (or name) and then press the **Select** button.
- 3 Either pick up the handset or press the **Handsfree** button to place the call.

To make a call using your phonebook

- 1 From the standby screen, press the **Names** button adjacent to the lower left corner of the screen.
- 2 You can either:
 - Press the **Select** button to view the first entry within the phonebook.
 - or
 - Press the numeric button that contains the first character of your required contact (press the button repeatedly until the appropriate letter is shown underlined on the screen). Then, press the **Select** button to display the phonebook entries that begin with the chosen character.
- 3 Use the ▲ or ▼ buttons to move up or down the list until the required entry is highlighted and press the **Select** button.
- 4 Either pick up the handset or press the **Handsfree** button to place the call.

9

To make a call using the calls register

- 1 From the standby screen, press the **Register** button.
- 2 Use the ▲ or ▼ buttons to highlight the required option: **Missed calls**, **Received calls** or **Dialled numbers**.
- 3 Press the **Select** button to display the chosen list.
- 4 Use the ▲ or ▼ buttons to highlight the required number and press the **Select** button.
- 5 Either pick up the handset or press the **Handsfree** button to place the call.

To receive an incoming call

When a call is received, your phone will emit the currently selected ringtone.

Note: If the caller's number has been declared by the network, it will be shown on the display. If the number is stored within your phonebook, the corresponding name of the contact will also be shown on the display.

- Either pick up the handset or press the **Handsfree** button.

To end a call

- Either replace the handset or (if using the speaker phone), press the **Handsfree** button.

To make a speed dial call

Your phone allows you to assign your five most valued contacts to special buttons located to the left of the keypad. For details about how to store your contacts, see page 20.

- 1 From the standby screen, press the required speed dial memory button.
- 2 Either pick up the handset or press the **Handsfree** button to place the call.

Options during a call

- To adjust earpiece or speaker volume during a call: Use the ▲ and ▼ buttons. *Note: Take care not to set the volume too high.*
- To mute/un-mute the call: Press the **Mute** button.
- To hold the current call: Press the **Menu** button and then press the **Select** button to choose the highlighted **Hold** option. To reconnect with the call, repeat the procedure and choose the **Unhold** option.
- To hold the current call and begin a new call - please see below.

Managing more than one call

Your phone has the ability to handle more than one call at a time. You may wish to speak to one person while another is on hold or possibly combine two or more calls to create a conference.

In each case, the phone will display a summary of the currently active and held calls.

Note: Support for call waiting and/or multi-party calling is required from your network service provider.

To place a call on hold and make a new call

- 1 During a call, press the **Menu** button to display the following:



- 2 Highlight the **New call** option and press the **Select** button.
- 3 Make the new call by dialling, by using the phonebook, the memory buttons or the calls register, as necessary.

The sections that follow provide details about how you can return to the held call or optionally join the calls to create a conference.


To end a call and return to another call

- Press the **Menu** button, highlight the **Remove a call** option and press the **Select** button. The display will show a list of calls, highlight the call that you wish to end and press the **Select** button.

To respond to a new waiting call during an existing call

During a call, if a new call is received, a call waiting tone will be heard and the display will show the name/number (if known) of the waiting call.

1 Press the **Menu** button to display the following:

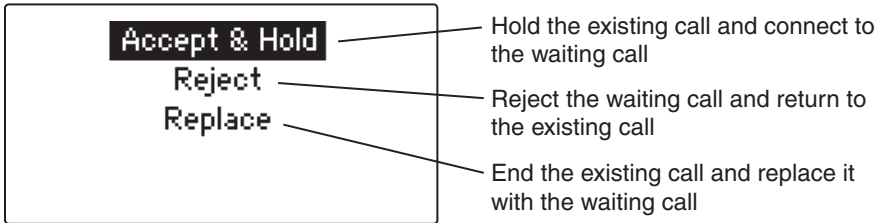


2 Use the ▲ or ▼ buttons to highlight an option and press the **Select** button.

To change between calls or create/manage a conference

If you have an active call and a held call, your phone provides more options.


1 Press the **Menu** button to display the following:

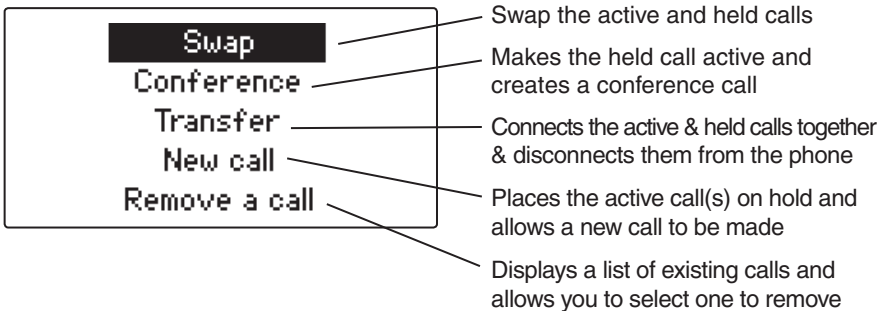

2 Use the ▲ or ▼ buttons to highlight an option and press the **Select** button.

When you have two or more active calls (i.e. a conference), the menu options change slightly:

1 Press the **Menu** button to display the following:

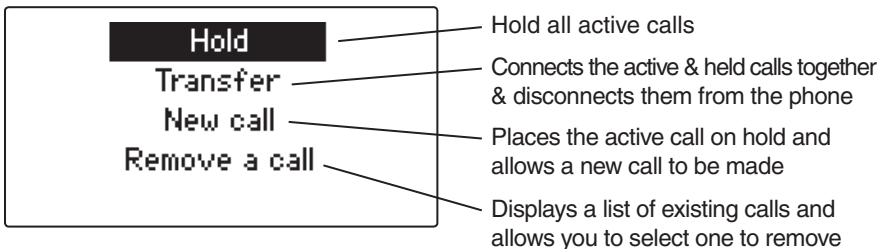

2 Use the ▲ or ▼ buttons to highlight an option and press the **Select** button.


Further information

- Adding or editing entries in the Phonebook - see page 14
- Sending and receiving SMS text messages - see page 22
- Changing ring tones - see page 30

Menu options

Your phone includes a menu of options that allow you to access features such as your phonebook and text messaging as well as the ability to customise phone operation to suit your requirements.

Use the buttons located directly below the display to control the menu:

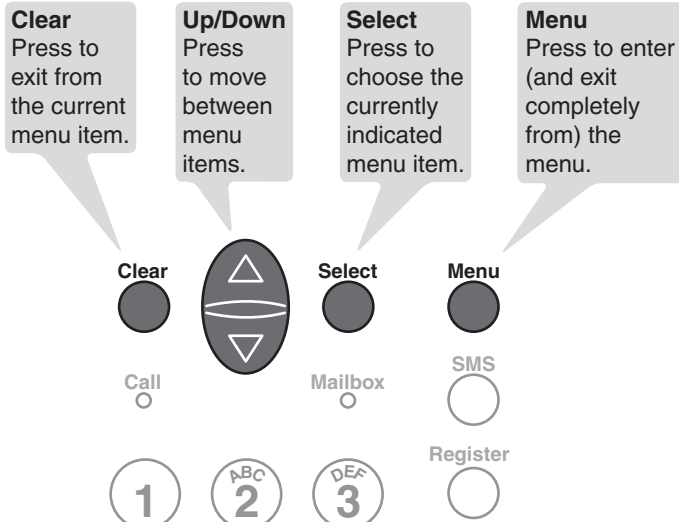

12

To access the menu

1 From standby, press the **Menu** button. You will see the first option:



2 Use the ▲ or ▼ buttons to move up or down the list of options and then press the **Select** button when the required option is highlighted.

Menu options layout

Phonebook	Search	<i>page 15</i>
	Add name	<i>page 16</i>
	Status	<i>page 17</i>
	Memory in use	<i>page 17</i>
	Utilities	<i>page 18</i>
Messages	Write message	<i>page 23</i>
	Inbox	<i>page 24</i>
	Sent items	<i>page 23</i>
	Settings	<i>page 25</i>
Call register	Missed calls	<i>page 26</i>
	Received calls	<i>page 26</i>
	Dialled numbers	<i>page 26</i>
	Show durations	<i>page 26</i>
	Clear	<i>page 27</i>
Divert	Divert all	<i>page 28</i>
	Divert when busy	<i>page 28</i>
	Divert no answer	<i>page 28</i>
	Divert when off	<i>page 28</i>
	Cancel divers	<i>page 29</i>
Tones		<i>page 30</i>
Settings	General	<i>page 32</i>
	Call	<i>page 33</i>
	Security	<i>page 34</i>
	Date & time	<i>page 34</i>
	Restore	<i>page 34</i>
Status		<i>page 34</i>

The pages that follow provide further information about each menu option.

Phonebook

The phonebook allows you to store and use many contact numbers and corresponding names. You can choose to store contacts within the in-built memory of the phone (up to 250 contacts) or within the memory located on your SIM card (cards vary in capacity). The advantage of the latter is that your contacts can easily be moved between different phones. The phonebook allows you to quickly switch between the two storage areas and also to copy contacts between the two storage areas.


To use your phonebook to make calls

- Please follow the instructions given on page 9 of this guide.

Managing your phonebook

To view phonebook options

- 1 From standby, press the **Menu** button.
- 2 The Phonebook option is the first one, press the **Select** button to choose it. The display will show the list of phonebook sub-options:

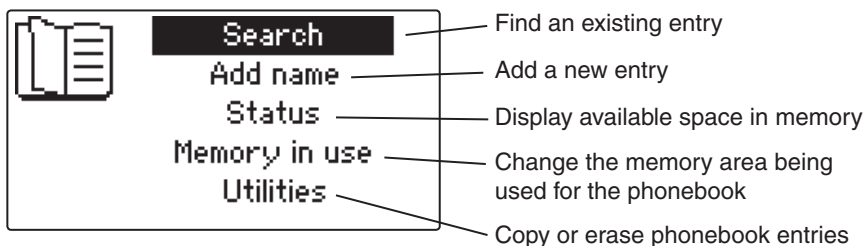


14

- 3 Use the ▲ or ▼ buttons to move the highlight bar up or down the list of options and then press the **Select** button when the required option is highlighted.

To view, edit or erase an entry

- 1 *View the phonebook options:* From standby, press the **Menu** button and then press the **Select** button.
- 2 Ensure that the **Search** option is highlighted and press the **Select** button.
- 3 Press the numeric button that contains the first character of your required contact (press the button repeatedly until the appropriate letter is shown on the screen).
- 4 Press the **Select** button to display the phonebook entries that begin with the chosen character.
- 5 Use the ▲ or ▼ buttons to highlight the required entry and press the **Select** button. A choice of three options will be given for the entry:

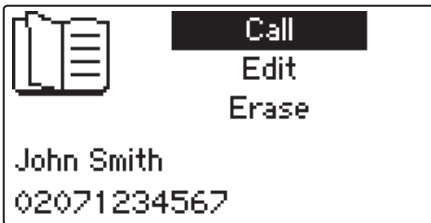

- 6 Use the ▲ or ▼ buttons to highlight the required option and press the **Select** button.
 - If you choose **Call**, the phone will dial the chosen entry in handsfree mode.
 - If you choose **Edit**, the name of the entry will be displayed such that you can change it. *Please follow the guidelines given in 'When entering or editing contacts' on the next page.*

When the contact name is complete, press the **Select** button to save your changes and to display the corresponding phone number. Edit the phone number in a similar manner and press the **Select** button to save altered entry.
 - If you choose **Erase**, the screen will ask you to **Confirm erase**. Press the **Select** button to confirm or the **Clear** button to abort.

To add a contact

Phonebook entries can either be stored within the in-built phone memory or within the SIM card memory. It is possible to change between the two areas and also to copy entries between them. If necessary, check which memory area is currently in use and how many free locations remain before entering a new contact entry - please see "To check memory status" opposite.

- 1 *View the phonebook options:* From standby, press the **Menu** button and then press the **Select** button.
- 2 Use the ▲ or ▼ buttons to highlight the **Add name** option and press the **Select** button.
- 3 The display will first prompt you to enter a name for the new contact. Please follow the guidelines 'When entering or editing contacts' shown below.
- 4 When the contact name is complete, press the **Select** button. The display will now prompt you to enter a phone number for the new contact.
- 5 Enter the required phone number for your contact and then press the **Select** button. If successful, the display will show: **Saved** as the new contact is added to the Phonebook list held within the current memory storage area.


16

When entering or editing contacts:

- Use the main numeric keys to enter text. Press a numeric key repeatedly to produce the appropriate character (characters appear in the order printed on the key).
- When the required character has been entered, wait for one second before entering another character that is situated on the same key. A new character on a different key can be entered immediately.
- To change between upper and lower case characters, press the **#** button.
- Remember that this is a mobile phone, you must enter the full phone number, including area code, even if the contact is in your area.
- To enter a space, press the **0** button.
- To enter an international number, press the ***** button twice (a **+** symbol will be displayed to represent the international dialling code - you do not need to enter the usual two zeroes). Then enter the country code (two or more digits) and the remaining number (with the initial zero of the area code removed).
- To erase a character: Press and release the **Clear** button.
- To erase all characters: Press and hold the **Clear** button.

To check memory status

- 1 *View the phonebook options:* From standby, press the **Menu** button and then press the **Select** button.
- 2 Use the ▲ or ▼ buttons to highlight the **Status** option and press the **Select** button. A display similar to the following will be shown:

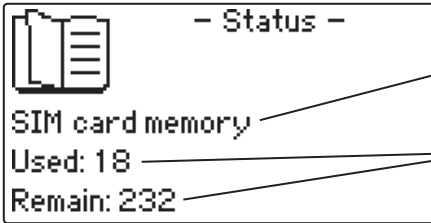

Indicates the currently active phonebook memory: *Phone* or *SIM card*


The number of contact entry spaces used and remaining within the currently active memory

- 3 Press the **Select** button to return to the previous menu screen.

To change the phonebook memory space

Phonebook entries can either be stored within the in-built phone memory or within the SIM card memory. This option allows you to change the currently active memory area.

- 1 *View the phonebook options:* From standby, press the **Menu** button and then press the **Select** button.
- 2 Use the ▲ or ▼ buttons to highlight the **Memory in use** option and press the **Select** button. A display similar to the following will be shown:

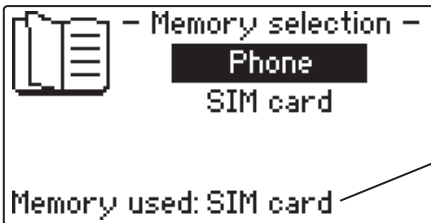


Indicates the currently active phonebook memory: *Phone* or *SIM card*

- 3 Use the ▲ or ▼ buttons to move the highlight to the required phonebook memory location and press the **Select** button. The display will confirm whether the switching operation was successful.

To copy phonebook memory entries

This option allows you to copy all entries between the phone and SIM card memory areas or alternatively, to erase all entries within a chosen memory area.

- 1 View the phonebook options: From standby, press the **Menu** button and then press the **Select** button.
- 2 Use the **▲** or **▼** buttons to highlight the **Utilities** option and press the **Select** button. A display similar to the following will be shown:

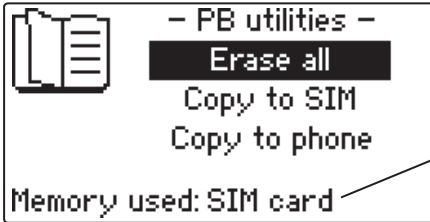


Indicates the currently active phonebook memory: *Phone* or *SIM card*

- 3 Use the **▲** or **▼** buttons to highlight the required option and press the **Select** button.

- **Erase all** - the display will request confirmation of the erase action on the memory area listed in the lower section of the screen.

IMPORTANT: The erase action is irreversible, so be sure to double check that the name of the memory area you wish to erase (Phone memory or SIM card memory) is displayed at the bottom of the screen.

Use the **▲** or **▼** buttons to highlight the **Yes** option and press the **Select** button, or **No** (or press the **Clear** button) to abort.

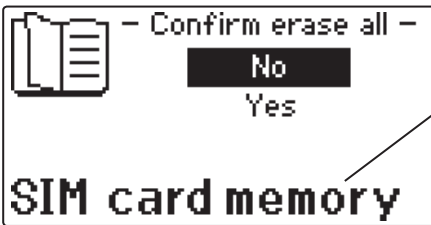

Double check that the appropriate memory area to be deleted is currently active

- **Copy to SIM** - copies all phonebook entries held within the phone memory to the SIM card*.
- **Copy to Phone** - copies all phonebook entries held within the SIM card to the phone memory*.

** A copied entry with the same name/number as an existing entry in the destination memory area will occupy a neighbouring location and will not overwrite the original. The phone will check the destination memory for sufficient vacant spaces before starting.*

Note: Most SIM cards cannot store contact names as long as those that can be stored within phone memory. When copying long contact names, any characters that exceed the SIM card memory limit will be discarded, leaving the name truncated.

Accessibility features

Your Burnside P230 phone provides several features that affect how it is accessed, both by the users of the phone and also those who are calling into it. The accessibility features are centred around the five speed dial memory buttons, which allow quick access to your closest or most regular contacts. You can:

- Store a name and number into each of the five speed dial memory buttons for rapid access and dialling.
- Enable one press calling for any of the five speed dial buttons - no need to pick up the handset or press the Handsfree button.
- Enable the Auto Handsfree feature for incoming calls from phone numbers registered within any of the five speed dial memories - no need to press any buttons to receive a call.
- Restrict outgoing calls to only the numbers stored within the five speed dial memories - useful to prevent unauthorised dialling.

Speed dial memory buttons

To program the speed dial memory buttons

1 From standby, press the button that you wish to program.

The items shown on screen will depend on whether a number is already associated with that button:


- If the button is vacant, you will see three options: **Phonebook**, **Create** and **Options**.

Choose **Phonebook** to copy an existing contact from your phonebook,


Choose **Create** to enter a name and a number for the new contact, or

Choose **Options** to adjust settings for the chosen memory button.

- If the button is occupied, you will see four options:

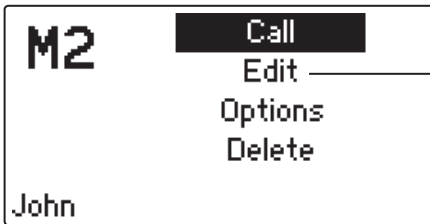

Choose **Edit** to adjust or replace an existing name and number for the chosen speed dial memory.

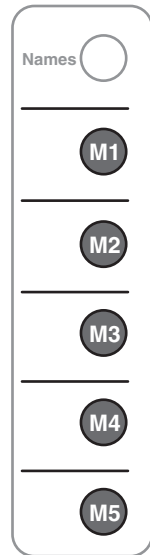

2 If desired, carefully remove the transparent plastic surround sheet from the memory buttons, write the names of your contacts on the paper insert and then replace the plastic surround sheet.

To delete a speed dial memory

- 1 From standby, press the button that you wish to delete.
- 2 Highlight the **Delete** option and press the **Select** button.
- 3 Press the **Select** button once again to confirm.

To make a speed dial call

You can make a speed dial call in several ways:

- Press a memory button and press **Select** to open the speaker phone,
- Press a memory button and pick up the handset, or
- Pick up the handset (or press the **Handsfree** button) and then press a memory button.
- Enable one-press calling (see opposite) for that button. Henceforth you need only to press the memory button to begin a handsfree call.

To enable one-press calling


Each of the five speed dial memories allows you to enable a 'one press call' option. Once enabled, you only need to press the memory button to place a call. The call will be placed after 2 seconds, providing no other button is pressed.

- 1 From standby, press the required memory button.
- 2 Highlight the **Options** entry and press the **Select** button.
- 3 Highlight the **One press call** option and press the **Select** button. Use the ▲ or ▼ buttons to change the setting to **On** and press the **Select** button.

To enable Auto Handsfree

Each of the five speed dial memories includes an automatic answering feature. Once enabled, an incoming call from the correct phone number will be automatically accepted by the phone after a set number of rings.

- 1 From standby, press the required memory button.
- 2 Highlight the **Options** entry and press the **Select** button. The following options will be shown:

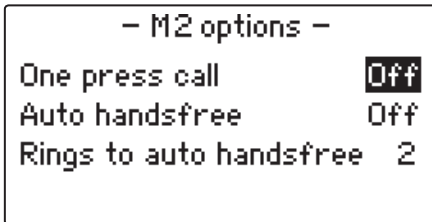

- 3 Highlight the **Auto handsfree** option and press the **Select** button. Use the ▲ or ▼ buttons to change the setting to **On** and press the **Select** button.
- 4 Optionally highlight the **Rings to auto handsfree** option and press the **Select** button. Use the ▲ or ▼ buttons to choose the number of rings (from 2 to 9) and press the **Select** button.

Once auto handsfree has been enabled, a call from the stored number will cause the P230 to take the call (using the handsfree speaker phone) after the set number of rings. In auto handsfree mode, microphone sensitivity is boosted to improve the pickup of distant voices, so it is likely that the caller will hear a slight echo of their own voice.

When the call is complete and the caller puts down their phone, the P230 will automatically return itself to standby. Throughout this process, the P230 user will not need to touch the phone once.

Note: Ensure that the phone and network from which you are calling supports caller identity and also check that the number stored in the speed dial memory matches that of the calling phone.

To restrict outgoing calls

You can simplify phone operation so that it will make outgoing calls using only the five speed dial memory buttons. The restrict mode will also prevent access to all menu features and disable the on/off power button. Calls to the emergency services remain unaffected.

- 1 From standby, press the **Menu** button, then use the ▲ or ▼ buttons to display the **Settings** option and press the **Select** button.
- 2 Use the ▲ or ▼ buttons to highlight the **Security** option and then press the **Select** button.
- 3 Use the ▲ or ▼ buttons to highlight the **Restrict to M keys** option and then press the **Select** button.
- 4 You will be asked to **Enter code**. Type the last four digits of the unique IMEI number that is printed on the base of the phone (or is available in the Status screen) and press the **Select** button.

If the code is correct, the  icon will be shown in the standby screen.

To unrestrict outgoing calls


- 1 Press the **Menu** button, enter the same four digit code that was used to lock the phone and then press the **Select** button.

Messages

Your phone allows you to take full advantage of the text messaging services available through mobile phone technology. You can create and receive text messages up to a maximum of 160 characters per message.

Note: Text messaging requires network support - ensure that your service provider contract allows SMS (Short Message Service).

Using messaging

You can use the messaging feature at any time when you are not engaged within a call. When new messages are received, a ring tone will sound and the  character will be shown on the display. The **Mailbox** indicator, located below the **Select** button, will also flash.

Note: You can change the melody and the volume of the incoming message ring tone independently of the incoming call ring tone - see page 30.

To view the messaging menu

Either:

- Press the **SMS** button,

or


- From standby, press the **Menu** button, then press the **▼** button to display the **Messages** option and press the **Select** button.

22 The display will show the available messaging menu options:




To write and send a new message

- 1 *View the messaging menu:* From standby, press the **SMS** button.
- 2 Press the **Select** button to choose the first option: **Write message**. The text editor will be displayed:

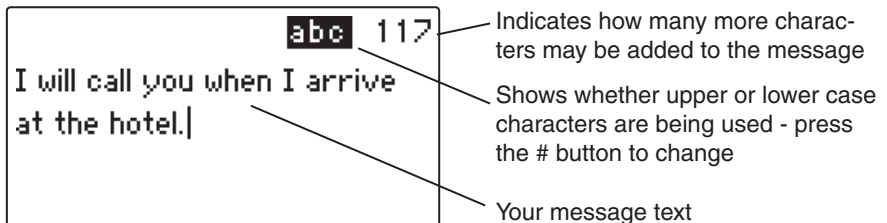

- Use the numeric buttons to enter your message. Please follow the guidelines 'When creating or editing a message' shown overleaf.
- When your message is complete, press the **Select** button to display the following message options:

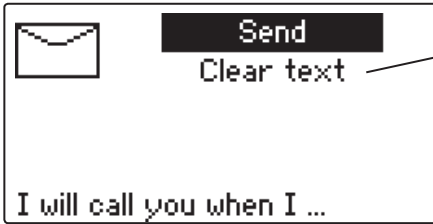

Erases the whole message

- To send the message, ensure that the **Send** option is highlighted and press the **Select** button to display your options for addressing the message:
 - Choose the **Phonebook** option to select an existing contact and use the **Select** button to confirm.
 - Choose the **Enter number** option to type the phone number of your intended recipient. Once the number is entered, press the **Select** button twice to send.
- The screen will indicate whether the message was successfully sent to the network.

To delete/edit/re-send previously sent messages

- View the messaging menu:* From standby, press the **SMS** button.
- Press the ▼ button to highlight the **Sent items** option and press the **Select** button. A list of your previously sent messages will be displayed.
- Highlight the required message and press the **Select** button to display it.
- Press the **Select** button to view the available options:



Choose to re-send the message without editing it

Choose to edit the message before sending. After you have edited the message, press the **Select** button and choose the **Send** option.



- If you have chosen the **Send** option, you will have two addressing options:
 - Choose the **Phonebook** option to select an existing contact and use the **Select** button to confirm.
 - Choose the **Enter number** option to type the phone number of your intended recipient, then press the **Select** button twice to send.
- The screen will indicate whether the message was successfully sent to the network.

When creating or editing a message:

- Use the main numeric keys to enter text. Press a numeric key repeatedly to produce the appropriate character (characters appear in the order printed on the key).
- When the required character has been entered, wait for one second before entering another character that is situated on the same key. A new character on a different key can be entered immediately.
- To change between upper and lower case characters, press the **#** button.
- To enter a space, press the **0** button once.
- To begin a new line, press the **0** button twice.
- To erase a character: Press and release the **Clear** button.
- To erase the whole message: Press the **Select** button, choose the **Clear text** option and press the **Select** button. Choose the **Write text** option to re-enter the message editor.
- Press the SMS button to return to the previous options menu.
- Press the Menu button to return to the standby screen.

24


To view new or old received messages

- 1 *View the messaging menu:* From standby, press the **SMS** button.
- 2 Press the ▼ button to highlight the **Inbox** option and press the **Select** button. A list of received messages will be displayed.
 - Unread messages are prefixed with 
 - Previously viewed messages are prefixed with 

Note: If the sender is listed within the phonebook, their name will be shown, otherwise a preview of the message will be displayed.
- 3 Use the ▲ or ▼ buttons to highlight the required message and press the **Select** button to view it.
- 4 Once viewed, either:
 - Press the **Clear** button to exit from the message, or
 - Press the **Select** button to view the message options, as described opposite.

To delete, reply to or forward a received message

- 1 View the received message as described previously.
- 2 Press the **Select** button to view the message options:

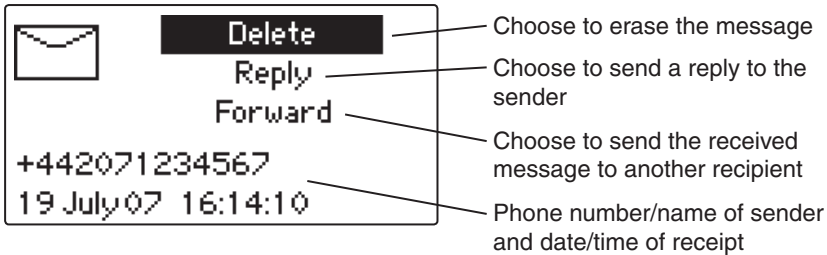

- 3 Use the ▲ or ▼ buttons to highlight the required option and press the **Select** button.
 - Choose the **Delete** option to erase the message and use the **Select** button to confirm.
 - Choose the **Reply** option to contact the sender. You will be offered two options: **New text** or **Edit text**. The former option provides a blank message editing screen, whereas the latter option displays the original message for you to edit or append. Please follow the guidelines 'When creating or editing a message' shown on the opposite page.

When complete, press the **Select** button and then press the **Select** button again to confirm transmission to the original sender's phone number.
 - Choose the **Forward** option to send the message to another recipient. You will be offered two options: **Phonebook** or **Enter number**. Use the former to select an existing contact from your phonebook or the latter to enter a new number (and press the **Select** button twice to send.)

25

To view/alter the service centre number

Your phone uses your service provider's message service centre in order to retrieve incoming text messages. Usually, the service centre number is pre-configured on your SIM card and requires no alteration. However, your phone provides access to the number should it need to be altered.

Note: Do not alter the service centre number unless specifically requested to do so by your service provider.

- 1 Press the **SMS** button, use the ▲ or ▼ buttons to highlight the **Set-tin@s** option and press the **Select** button.
- 2 Press the **Select** button to display the current SMS service centre number.
- 3 Use the **Clear** button to erase digits as required and then enter the new number.
 - To exit without retaining any changes, press the **Menu** button.
- 4 When complete, press the **Select** button to save and exit.

Call register


The call register holds records of all recent incoming and outgoing calls. Using the list you can quickly place a call to a recent number or add a new contact to your phonebook. *Note: Incoming calls for which the number is unobtainable (e.g. withheld or unavailable numbers, etc.) will not be listed within the register.*

To view the call register

Either:

- Press the **Register** button,
- or
- From standby, press the **Menu** button, then press the ▼ button to display the **Call register** option and press the **Select** button.


The display will show:

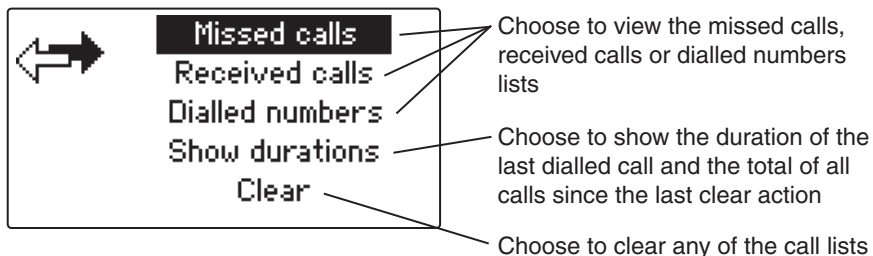

26


To use a number from the call register (save to phonebook)

- 1 *View the call register menu:* From standby, press the **Register** button.
- 2 Use the ▲ or ▼ buttons to highlight the required option and press the **Select** button:
 - **Missed calls** - Lists all incoming calls that were not answered.
 - **Received calls** - Lists all incoming calls that were answered.
 - **Dialled numbers** - Lists all outgoing calls that have been made.
- 3 Use the ▲ or ▼ buttons to highlight the required phone number and press the **Select** button. The display will show:

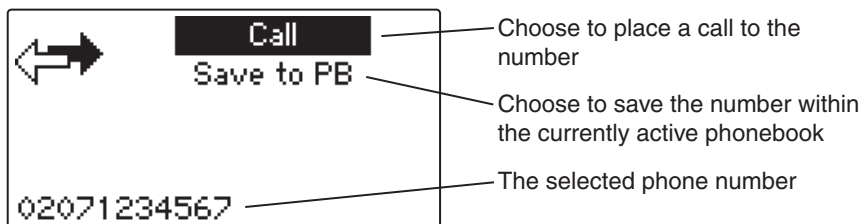

4 You can now, either:

- Choose the **Call** option to dial the number immediately, or
- Choose the **Save to PB** option to create a new contact within your phonebook:
 - a) Highlight the **Save to PB** option and press the **Select** button. The display will prompt you to enter a name:

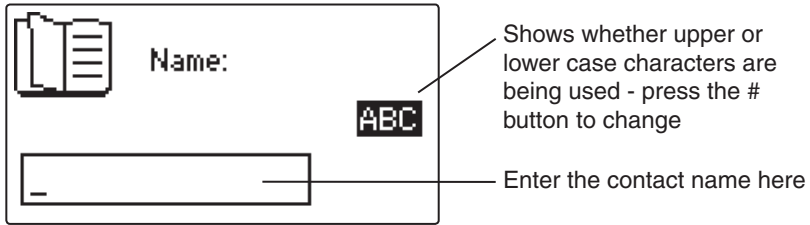

- b) Use the numeric buttons to enter a name for the contact. Please follow the guidelines 'When entering a name' shown below.
- c) Press the **Select** button to save the name. The display will now provide the opportunity to edit the phone number that you copied from the call register. If necessary, use the **Clear** button and the numeric buttons to change the number. Press the **Select** button to save the new phonebook entry. *Note: The new contact will be saved to whichever memory is currently being used by the phonebook: Phone memory or SIM card memory.*

27

When entering a name:

- Use the main numeric keys to enter text. Press a numeric key repeatedly to produce the appropriate character (characters appear in the order printed on the key).
- When the required character has been entered, wait for one second before entering another character that is situated on the same key. A new character on a different key can be entered immediately.
- To change between upper and lower case characters, press the **#** button.
- To enter a space, press the **0** button.
- To erase a character: Press and release the **Clear** button.

To clear a calls list

- 1 *View the call register sub menu:* From standby, press the **Register** button.
- 2 Use the **▲** or **▼** buttons to highlight the **Clear** option and press the **Select** button.
- 3 Use the **▲** or **▼** buttons to highlight the required list-type and press the **Select** button. The screen will ask you to confirm the erase procedure.
- 4 Press the **Select** button to confirm.


Divert

The divert function allows you to determine the conditions upon which incoming calls will be diverted to other numbers (either another phone or a voice mail box) when you are unavailable. You can set the same or different numbers for each call divert option.

Note: This function is dependent upon support from your service provider.


To set or change divert options

- 1 From standby, press the **Menu** button, then press the ▼ button to display the **Divert** option and press the **Select** button. The range of divert menu options will be displayed:

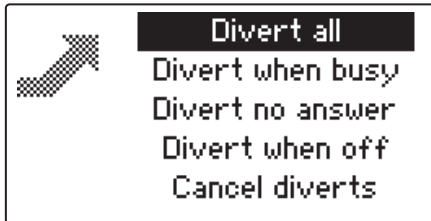

- **Divert all** - Diverts all incoming calls to the specified number.
- **Divert when busy** - Diverts incoming calls only when your phone is already engaged in a call.
- **Divert no answer** - Diverts incoming calls if you do not answer your phone after a selectable period of time (in seconds).
- **Divert when off** - Diverts incoming calls if your phone is switched off or cannot be located within the mobile phone network.
- **Cancel diverts** - Removes all call divert settings.

- 2 Use the ▲ or ▼ buttons to highlight the required option and press the **Select** button. For the top four options, the response will be similar. The display will provide the following options:

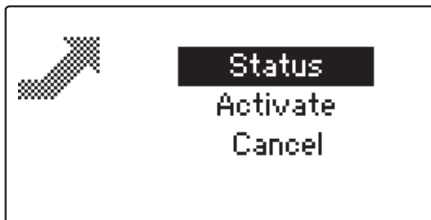

- **Status** - Choose this option to send a query to your service provider to determine the current divert settings. A response is usually returned and displayed on screen within a few seconds.
- **Activate** - Choose this option to enable the selected divert scenario.
- **Cancel** - Choose this option to cancel the selected divert scenario.

- 3 *When activating a divert:* Highlight the **Activate** option and press the **Select** button.
- 4 You now need to determine where you would like to divert the calls. You will be presented with two options:
 - **To voicemail** - Choose this option to use the voicemail number that is stored on your SIM card.
 - **To number** - Choose this option to divert calls to another phone number.
- 5 *When diverting to another phone number:* Highlight the **To number** option and press the **Select** button. You will be presented with another two options:
 - **Phonebook** - Choose this option to divert calls to a number held within your phonebook.
 - **Enter number** - Choose this option to enter a new phone number for the divert process.
- 6 Once you have entered or selected your divert number, press the **Select** button to register the changes with your service provider. A confirmation (or error) message will be received within seconds and will be displayed on screen.

To cancel diverts

Divert options can be arranged either individually or collectively to cover differing instances of your unavailability. Similarly, you can cancel scenarios individually or collectively to suit your requirements.


- 1 From standby, press the **Menu** button, then press the ▼ button to display the **Divert** option and press the **Select** button.
- 2 You can cancel diverts in two ways:
 - *Individually* - Highlight the divert option that you wish to cancel and press the **Select** button. Next, highlight the **Cancel** option for that divert and press the **Select** button. The cancel request will be sent to your service provider and a response will be received within seconds and will be displayed on screen.
 - *Collectively* - Highlight the **Cancel diverts** option and press the **Select** button. The request to cancel all diverts will be sent to your service provider and a response will be received within seconds and will be displayed on screen.

Tones

You can set different ring tones for your incoming message and incoming SMS text messages. Additionally you can set separate volume levels for both types of tones.

To set tones


- 1 From standby, press the **Menu** button, then use the ▲ or ▼ buttons to display the **Tones** option and press the **Select** button. The various tone settings will be displayed:

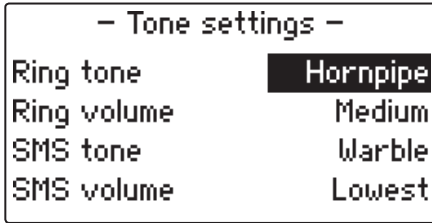

Controls for incoming call tones

Controls for incoming SMS message tones

- 2 Use the ▲ or ▼ buttons to highlight the required setting and then press the **Select** button. An option box will open to allow you to change the chosen setting and a sample of the tone and volume level will be played:

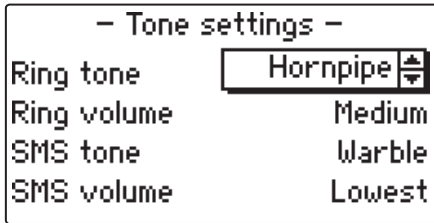


- 3 Use the ▲ or ▼ buttons to scroll through the available items for the chosen setting. When the setting is correct, press the **Select** button.

Settings

The phone has numerous settings that allow you to customise its operation to suit your requirements.

To view and change settings

- 1 From standby, press the **Menu** button, then use the ▲ or ▼ buttons to display the **Settings** option and press the **Select** button. The various settings are arranged as five main options:

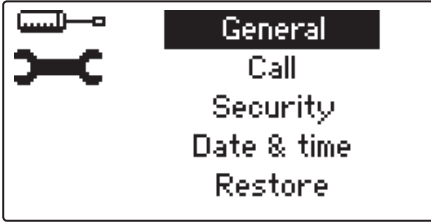


- 2 Use the ▲ or ▼ buttons to highlight the required option and then press the **Select** button.
 - The various settings are discussed on the next three pages.
- 3 Within the chosen option, use the ▲ or ▼ buttons to highlight the required setting and then press the **Select** button.

The response of the chosen setting will vary depending on its function. Some will require a numeric input using the keypad, some will present other options for selection and others will allow you to alter their value using the ▲ or ▼ buttons. In each case, make your change and press the **Select** button to fix the change. To exit from the option, press the **Clear** button.

General settings

When you select the General option, you will be given two options: 'Change settings' and 'Edit banner'. If you choose 'Change settings', you will see the following:

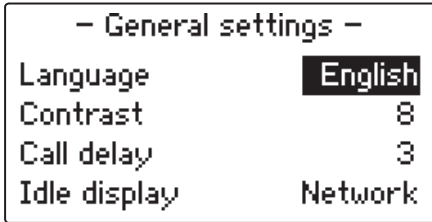

Language: Determines the language used for all phone menus and prompts.

Contrast: Use this option to adjust the contrast between the display characters and the screen background. Adjustable between 0 and 15, the screen contrast will immediately respond as you change the value.


Call delay: When you dial phone numbers after lifting the handset (or pressing the handsfree button) the phone waits for a period of time after the last entered number before it sends the phone digit to the network. Using this option you can determine the time delay (in seconds) between 1 and 9 seconds.

Idle display: Determines what will be displayed in the main portion of the standby screen. 'Network' displays the name of the current service provider, 'Big clock' displays a large digit 24-hour clock and also increases the size of the date display characters. 'Banner' displays a message which you can edit (see below for details). The network name is not displayed within the standby screen when the big clock or banner options are enabled.

32


Edit banner

Within the General option, if you choose 'Edit banner', you will see the following:

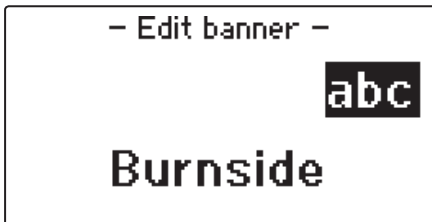

The banner editor allows you to create a message for the standby screen that can be up to 19 characters long (depending on character widths). Use the **Clear** button to remove characters. Enter new characters in the same way as for creating text messages (# changes between upper and lower case). Press the **Select** button to save. Ensure that the 'Idle display' option within 'General settings' is set to the 'Banner' setting.

Call settings

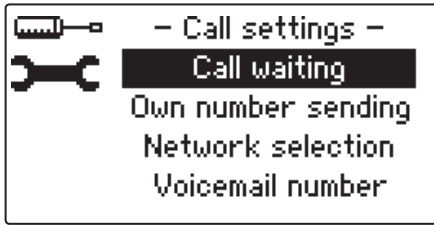

Call waiting: This option allows you to *Activate* or *Cancel* the call waiting function provided by your service provider. When enabled, call waiting will audibly notify you (while you are within a call) that another incoming call has been received.

Note: This function is dependent upon support from your service provider.

Own number sending: This option allows you to determine how your phone number is declared to people that you call. You have three options: *Yes* (declare the number), *No* (withhold the number) or *Set by network* (go along with your service provider's standard setting).

Network selection: This option allows you to influence how the phone should seek out and use other host networks when your usual network is not available. As standard, the phone uses the *Automatic* setting which will search for and use located networks according to availability and any pre-arranged roaming agreements between service providers.

The *Manual* option allows you to scan for all available networks in the vicinity and choose one from the resulting list.


Voicemail number: This option allows you to enter or edit the phone number to which calls can be diverted. The appropriate voicemail phone number is usually pre-programmed on your SIM by your service provider and should not be altered unless specifically requested.

Security settings




Change PIN request: Use this option to determine whether the SIM card should request the PIN code whenever the phone is switched on - the current status of the setting is shown in the lower half of the screen. When selected, you will be requested to enter the existing PIN code before the setting can be changed.

Change PIN: This option allows you to change the PIN code that is stored on the SIM card. When selected, you will be requested to enter the existing PIN code and then enter the new code twice to confirm. For security purposes the entered digits are not displayed on the screen, however, entered numbers are represented by asterisks.

Restrict to M keys: When selected, this option restricts operation to the five speed dial memory buttons and emergency calls only (the  icon is shown when locked and the memory buttons do not display their stored numbers). In addition, if only one memory button is programmed, you only need to lift the handset or press the **Handsfree** button - the phone will automatically dial that number.

When you select this option, you will be asked to enter a 'Code'. Enter the last four digits of the unique IMEI number that is printed on the base of the phone (also displayed in the Status screen) and press the **Select** button. You will be asked for the code again to unlock the mode when you next press the **Menu** button.

Date and time settings

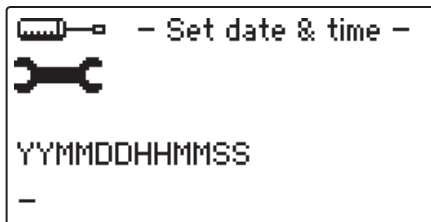

Use this option to set a valid date and time for the internal clock.

You will be prompted to enter both the date and time within a single series of digits beginning with the year and ending with the seconds - *Note: two digits per item*. The **Clear** key can be used to delete incorrect digits. Press the **Select** key to save when the entry is complete.

Status

This screen provides additional status information that is normally hidden from view.

To view the status information

- 1 From standby, press the **Menu** button, then use the ▲ or ▼ buttons to display the **Status** option and press the **Select** button. The status screen will be displayed:

```
- Status -  
Signal level: 43% (-87dBm)  
Battery voltage: 4.119V  
IMEI: 356312009164475  
Model:P230 Version: x.xx
```

Signal level: Shows the current signal strength expressed in both logarithmic form (dBm) and as a percentage roughly equivalent to actual received signal level compared to its possible maximum.

The signal level reading can be a useful tool when positioning the phone and antenna for best reception. Display the status screen and move the phone/antenna until you achieve the highest percentage reading (or lowest negative dBm reading) within the available area.

Battery voltage: Indicates the voltage charge of the battery. The working range is between 3.6V and 4.2V. At 3.6V, the phone will automatically power down to protect the battery from complete exhaustion.

IMEI: The *International Mobile Equipment Identity* is the unique code stored on your SIM card that differentiates it from every other SIM card, worldwide.

Model: Indicates the model number of the phone (P230).

Version: Indicates the current version of the internal phone software.

Restore

Use this option to return the phone settings to their standard settings. Such a restore operation does not affect the contents of the phonebook, the SMS message boxes or the call register.

Options

Magnetic mount antenna

This optional antenna has a magnetic mount and a two metre cable for remote positioning.


To attach the magnetic mount antenna

- 1 Ensure that the phone is switched off.
- 2 Unplug the supplied standard antenna, if it is installed.
- 3 Assemble the antenna by screwing the upper section into the base until it is finger tight.
- 4 Position the antenna where required, if possible on a secure metal surface (preferably iron or steel).

Note: Keep the antenna base away from monitor screens, televisions, credit cards, etc. because the magnetic base can affect these items.

- 5 Feed the antenna cable to the rear of the phone, attach the connector to the antenna socket and twist the collar until it is finger tight.

Notes: Ensure that the antenna cable does not cause a trip hazard. External antennae are also available for use in very low signal strength areas.

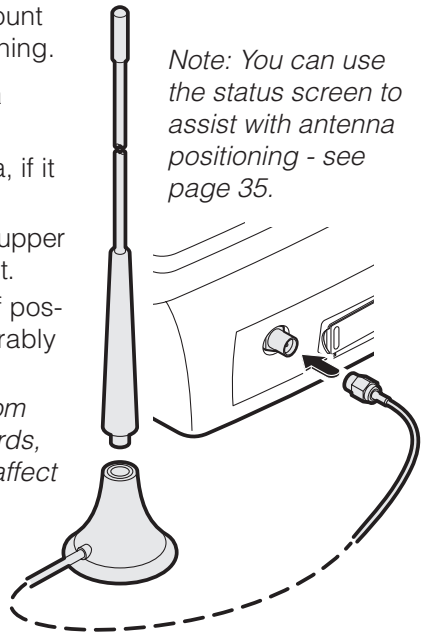


36

Wall bracket

This optional bracket allows the phone to be attached to a fixed vertical surface in a manner that prevents casual removal.

To mount the wall bracket

- 1 Fix the bracket securely to the mounting surface using the two slotted holes in the rear panel.
- 2 Place the phone onto the angled front panel, slide down the retaining clip to secure the phone in place and tighten the two adjustment screws using the supplied Allen key.
- 3 Connect the cables to the phone in the usual manner.

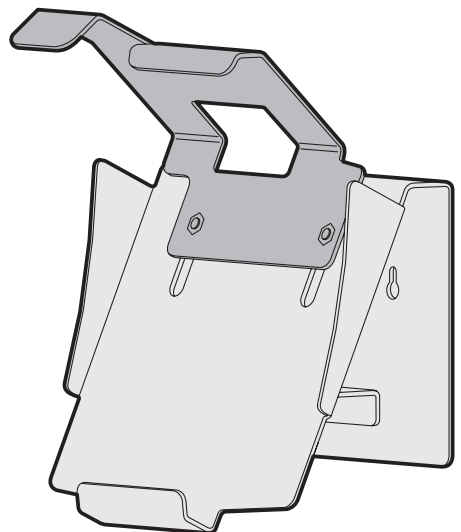

Important safety information

Operating environment

Make sure that no special regulation is in force that imposes restrictions on the use of mobile telephones. Restrictions to mobile telephones would also apply to this phone.

Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your phone.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 20 cm (6 inches) be maintained between a hand-held wireless phone and a pacemaker. The same restriction should apply to the external antenna of the phone. If you have any reason to suspect that interference is taking place, switch off the phone immediately.

Hearing aids

The phone radio signals may interfere with some hearing aids. In such event move the antenna as far away as practical or consult your hearing aid supplier.

Other medical devices

Operation of any radio transmitting equipment, including the phone, may interfere with the function of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions.

Switch off your phone in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles (e.g. electronic fuel injection systems, electronic anti-skid (anti-lock) braking systems, electronic speed control systems, airbag systems).

Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Potentially explosive atmospheres

Do not install the phone or site the antenna in any area with a potentially explosive atmosphere and obey all signs and instructions. Areas with a potentially explosive atmosphere are often but not always clearly marked. They include chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powders.

Emergency calls

Important! The phone, like any wireless phone, operates using radio signals, wireless and landline networks, as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely upon any wireless phone for essential communications (e.g. medical emergencies).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate cellular signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local cellular service providers. Emergency calls may be made even when a SIM card is not installed (subject to network availability) using the 112 dialling code.



Part number 362084 / rev 1.0e (E&OE)

Burnside Telecom Ltd

Burnside House
Isington
ALTON
GU34 4PP
United Kingdom

Tel/Fax: +44 (0)8700 762766

Tel: +44 (0)1420 520029

Email: info@burnsidetelecom.com

Web: www.burnsidetelecom.com