

Burnside P23

desktop mobile phone

user guide



Contents

2 Introduction

- 2 Welcome
- 3 Button and indicator overview

4 Setting up

- 4 Inserting your SIM card
- 5 Attaching the handset lead
- 6 Attaching the antenna
- 6 Attaching the power adapter

7 Using your phone

- 7 Switching on
- 8 Making and receiving calls


11 Menu options

- 12 Phonebook (option 1)
- 12 Managing your phonebook
- 15 Message (option 2)
- 15 Using messaging
- 19 Phone setup (option 3)
- 21 Call setup (option 4)
- 24 Security (option 5)
- 27 Important safety information

Introduction

Welcome

Thank you for choosing the P23 desktop mobile phone from Burnside Telecom. Combining the ease of use of a landline phone and the flexibility of a mobile phone, your P23 provides landline simplicity almost anywhere.

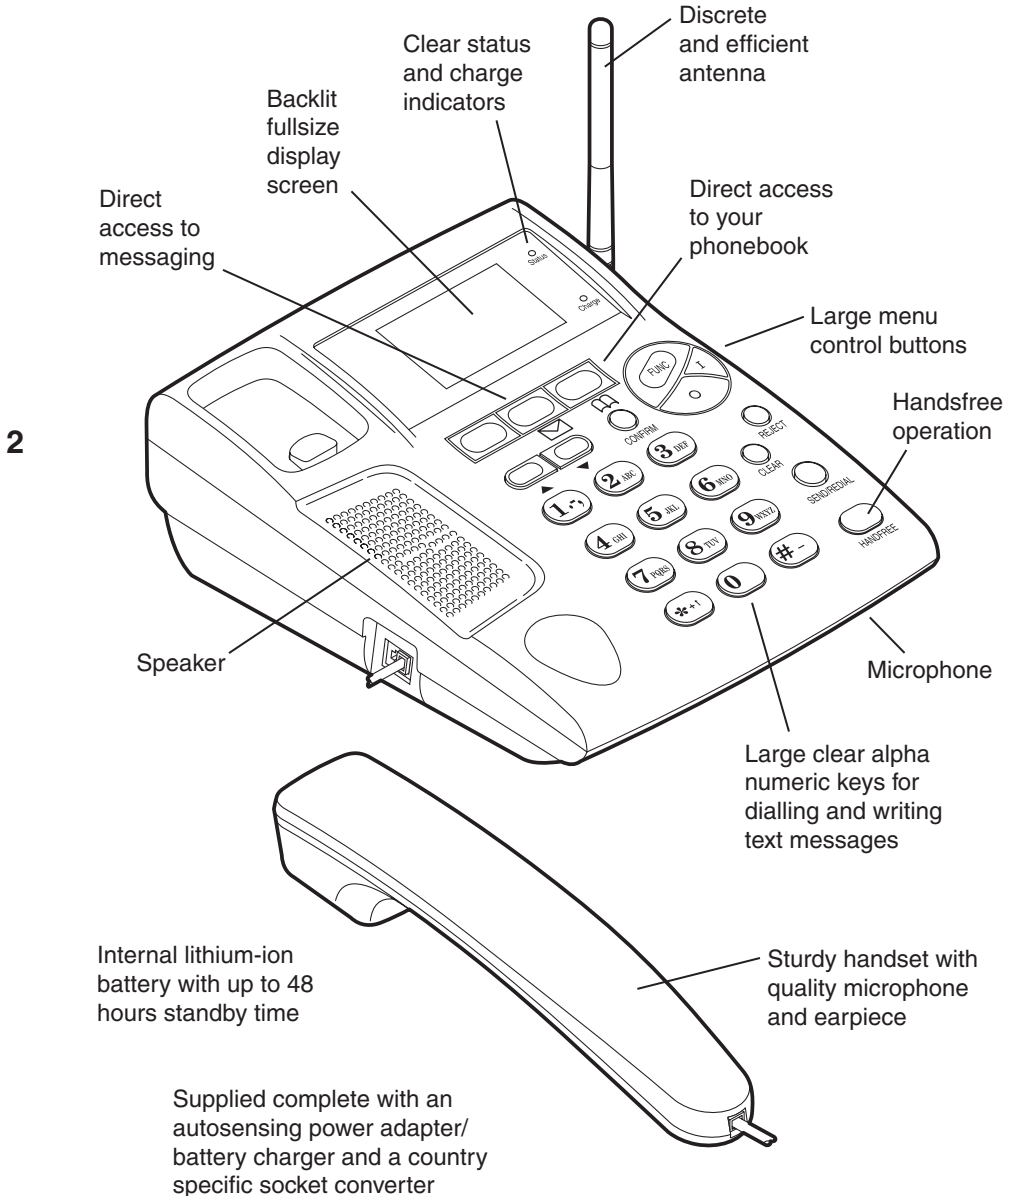

Button and indicator overview

Status (green)

Flashes intermittently to indicate standby mode. Continuous when a call is connected.

Charge (red)

Continuous when input power is provided by the adapter.

FUNC

Press to enter the functions menu.

O

Press to view the outgoing calls list.

I

Press to view the incoming calls list.

PHONEBOOK / RIGHT SOFTKEY

From standby, press to access your list of contacts. Otherwise, this button acts as the right softkey (see *Left softkey*).

REJECT

Press to cancel an unwanted incoming call.

CLEAR

Press to delete an entered digit, press and hold to delete all entered digits.

SEND/REDIAL

Press to redial the last called number (pick up the handset or press HAND-FREE first).

LEFT SOFTKEY

In a menu, press this button to carry out the action shown in the lower left corner of the display. The other two softkeys operate in a similar manner.

MESSAGES / MIDDLE SOFTKEY

From standby, press to read or create text messages. Otherwise, this button acts as the middle softkey (see *Left softkey*).




In a call: use to raise/lower the volume.
In a menu/list: use to move up or down the list of options.

CONFIRM

Press to activate a selected menu item.

HANDFREE

Press to begin handsfree dialling or to answer an incoming call without picking up the handset.

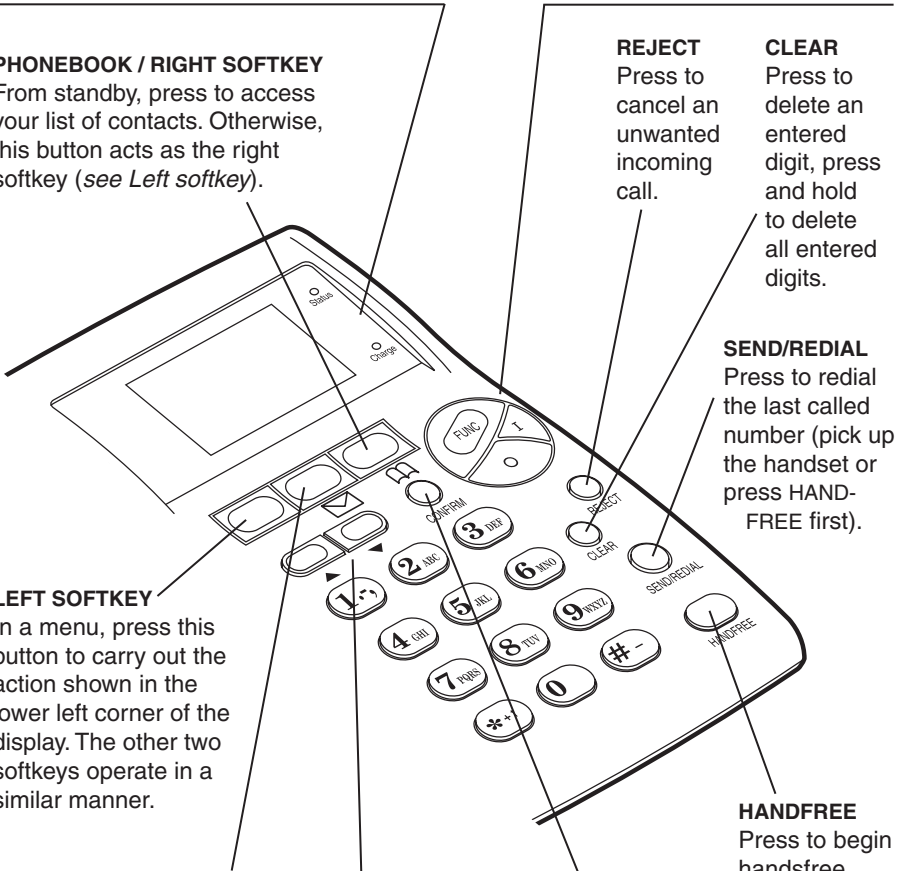

Setting up





Inserting your SIM card

Your SIM (Subscriber Identity Module) card is your identity on the mobile phone network. It can also store your phone-book contact details. Your phone will not operate without a working SIM card.

Note: When handling your SIM card, limit your movements to reduce static electricity and avoid touching the gold contacts.

To insert your SIM card

- 1 If your phone is on, switch it off. On the underside of your phone, locate the SIM holder situated within the access hole. If the access hole cover is installed, use a small crosshead screwdriver to remove it.
- 4 2 Slide the hinged lid of the SIM holder across so that it unlocks (A1). Next, swing open the hinged lid (A2).
- 3 Orientate your SIM card as shown (B1) and insert it into the hinged lid of the holder. Swing shut the hinged lid (B2) ensuring that the SIM card remains fully in place.
- 4 Press down upon the hinged lid and slide it across so that it locks into place (C).
- 5 Locate the supplied access hole cover and fixing screw. Insert the two tabs of the cover into the locating holes within the phone base (D). Push the cover fully into place and secure it using the screw (a small crosshead screwdriver is required).

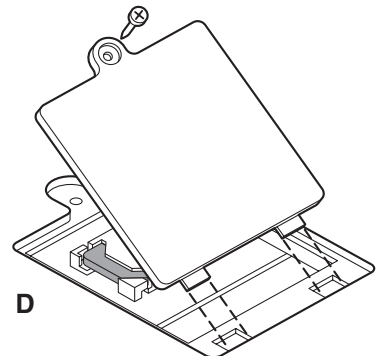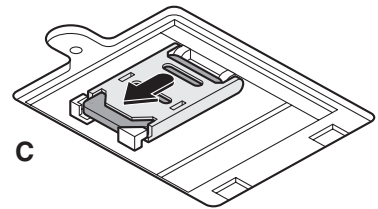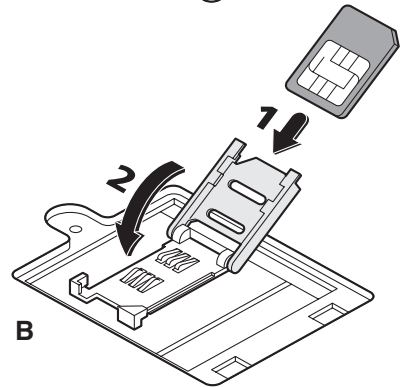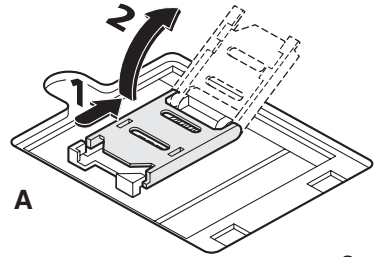


Attaching the handset lead

When supplied, the handset lead is packed separately from the handset.

To attach the handset lead

- 1 Locate the supplied coiled handset lead and remove the plastic packaging from it.
- 2 Insert the connector at one end of the lead (both ends are identical) into the socket at the base of the handset.

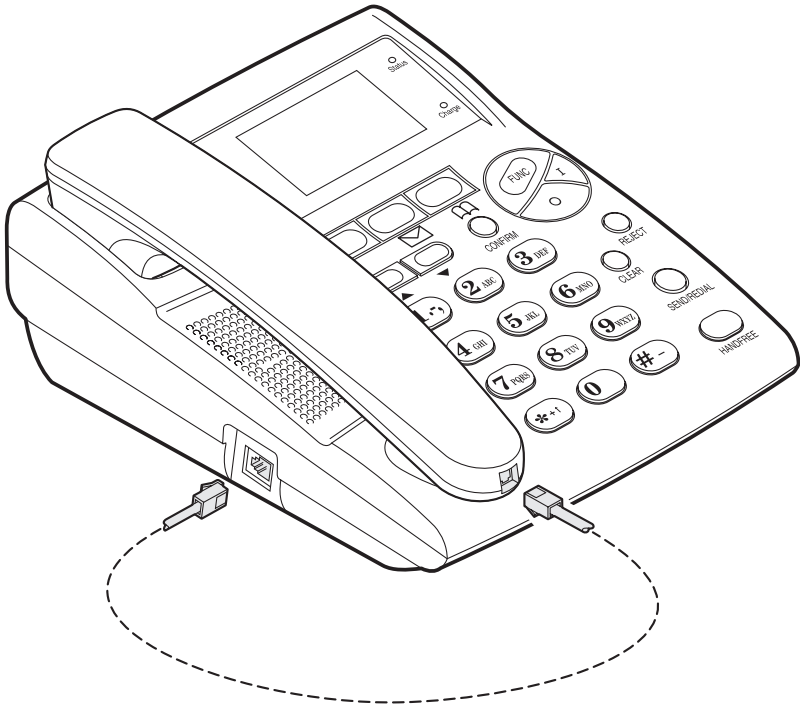


- 3 Insert the connector at the other end of the lead into the socket on the left side of your phone (when viewed from the front).

Attaching the antenna

The antenna is an essential part of your phone. Please do not attempt to use your phone without the antenna attached.

To attach the antenna

- 1 Locate the supplied antenna and carefully offer it to the connector on the right side of your phone (when viewed from the front). Rotate the ridged connector grip of the antenna clockwise so that it engages with, and locks onto the phone's connector.
- 2 When the connector is hand tight, position the antenna so that it is upright.

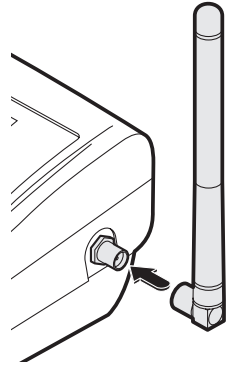

Attaching the power adapter

Your phone contains a battery that can support independent standby operation for up to 48 hours with a talk time of 5 hours. The supplied power adapter can be used periodically to charge the battery or continually to operate your phone.



6

To attach the power adapter

- 1 Locate the supplied power adapter and insert its small connector into the socket at the rear of your phone, next to the ON/OFF switch.
- 2 If your power socket is not compatible with the power adapter, locate the supplied socket converter. Attach the socket converter to the pins of the power adapter.
- 3 Plug the power adapter assembly into a nearby mains power socket and switch on the socket.

Note: Be sure to route the power cable so that it does not cause a trip hazard within the room.

- 4 Ensure that the internal battery is charged for at least 12 hours before your phone is used solely on battery power.

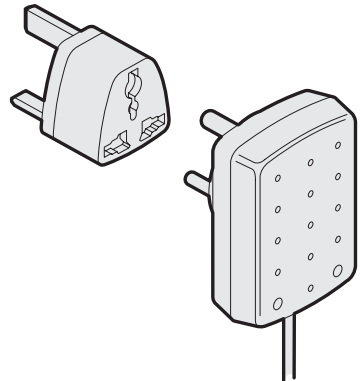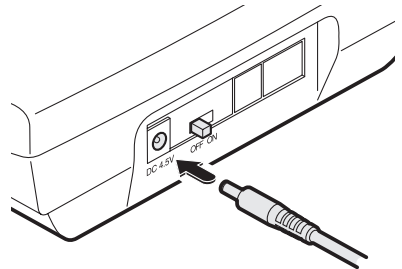

Using your phone


Switching on

To switch on

- 1 Ensure that the power adapter is attached (as discussed in the previous section) or that the internal battery is fully charged for at least 12 hours before it is used without mains connection.
- 2 At the rear panel of your phone, slide the power switch into its **ON** position.
 - The display should show **Initialize** while your phone prepares itself and then **Please Wait** while it attempts to contact your mobile network.
 - If your phone is configured to require a PIN (Personal Identification Number) code, you will be asked to enter it. Enter your four digit code and press the **CONFIRM** button.
 - If there is no available network service in the vicinity, the display will show **No Service**. If this condition continues, try a different location for your phone.

If the network connection is successful, your network's name (or that of a local network, if your usual network is unavailable) will be displayed:

7

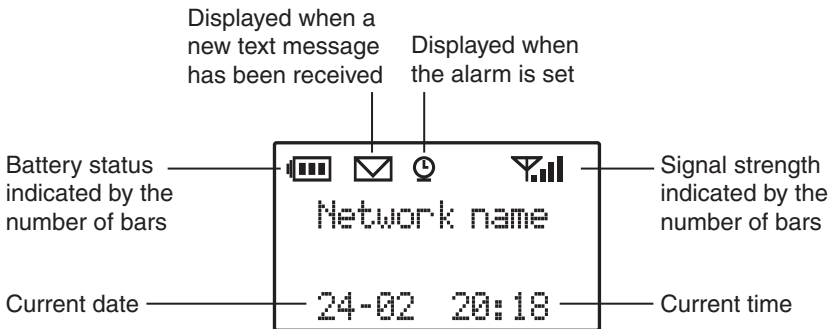

Making and receiving calls


Although your phone uses mobile communication technology, many efforts have been made to make users of normal landline phones as comfortable and familiar as possible. The result is subtle blending of the two technologies and manners of usage, as we hope you will appreciate.

*Important: If the network connection shows **No Service** you will not be able to successfully make or receive calls. There are many factors that can affect network availability and for this reason, your P23 phone should not be considered as a failsafe resource for making emergency calls.*

To make a call

- 1 Either pick up the handset or press the **HANDFREE** button.
- 2 Enter the required phone number using the keypad.
 - Four seconds after the last digit is pressed, your phone will attempt to place a call to the dialled number. You can alternatively press the **CONFIRM** button to place the call immediately after the last digit is entered.
 - To erase the last entered digit: Press and release the **CLEAR** button.
 - To erase all entered digits: Press and hold the **CLEAR** button.
 - To adjust volume during a call: Use the **▲** and **▼** buttons. *Note: Take care not to set the volume too high.*
 - To hold the current call: Press the right softkey (subject to network support).
 - To view a list of options (**Hold, Mute, Phonebook**): Press the left softkey.

8

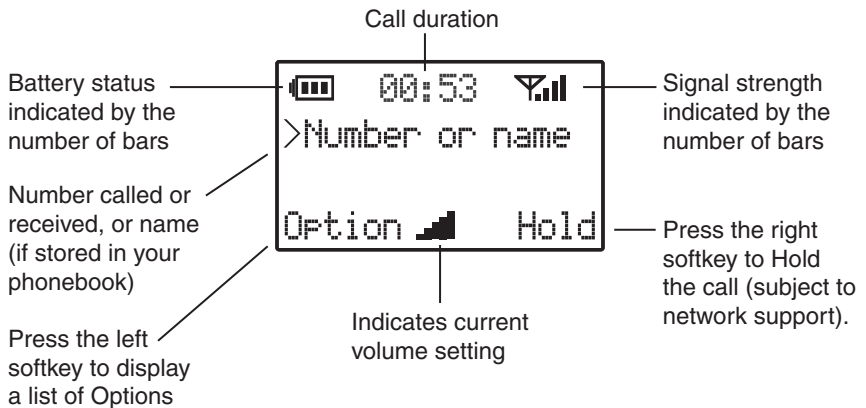

To redial the last number called


- 1 Either pick up the handset or press the **HANDFREE** button.
- 2 Press the **SEND/REDIAL** button.

To make a call using the calls list

- 1 Either:
 - Press the **I** button to view the incoming calls list, or
 - Press the **O** button to view the outgoing calls list.
- 2 Use the **▲** or **▼** buttons to move up or down the calls list until the required number is shown.
- 3 Press the **HANDFREE** button to place a call to the selected number.

To make a call using your phonebook

- 1 Press the **☞** button to display the first entry within your phonebook:

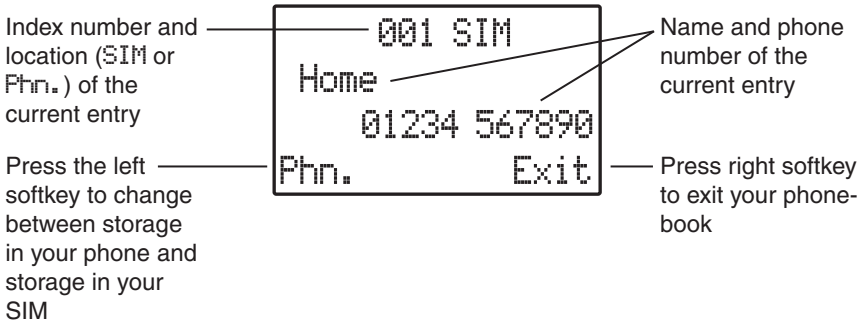

- 2 Use the **▲** or **▼** buttons to move up or down the calls list until the required number is shown.
- 3 Press the **HANDFREE** button to place a call to the selected number.

To make a call using the speed dial feature

Your phone includes a speed dial feature whereby you can store the ten numbers that you dial most regularly and assign each one to a key (0 to 9). For details about storing and assigning speed dial numbers, please see page 22.

- 1 Either pick up the handset or press the **HANDFREE** button.
- 2 Press and hold the appropriate key (0 to 9) for two seconds until your phone begins to dial the associated number.

To receive an incoming call

When a call is received, your phone will emit the currently selected ringtone.

Note: If the caller's number has been declared by the network, it will be shown on the display. If the number is stored within your phonebook, the corresponding name of the contact will also be shown on the display.

- Either pick up the handset or press the **HANDFREE** button.

To reject an incoming call

- Press the **REJECT** button and the phone will stop ringing.

To use 'in call' options

During a call you can mute the microphone, hold the current call or access your phonebook to find a contact number.

- 1 During a call, press the left softkey (**Option**) to display the in call options:



- 2 Select the required option, either:

- Use the ▲ or ▼ buttons to move up or down the list and then press the left softkey (**Select**) or the **CONFIRM** button, or
- Press the numeric key that matches the prefix for the required option, e.g. press 2 to mute the call.

*Note: When the call is held or muted, repeat the above process to re-enter the menu and select the **Unhold** or **Unmute** option, as necessary.*

To end a call


- 1 Either replace the handset or (if using speaker phone), press the **HAND-FREE** button. The display will show the call duration.

Menu options

Your phone includes a menu of options that allows you to access features such as your phonebook and messaging, and also to customise operation to suit your requirements.

To access the menu

- 1 From standby, press the red FUNC button.
- 2 Select the required option, either:
 - Use the ▲ or ▼ buttons to move up or down the list and then press the left softkey (**Select**) or the CONFIRM button, or
 - Press the numeric keys that match the prefix for the required options, e.g. press 2 to select **Message**, then press 3 to **Create**, etc.

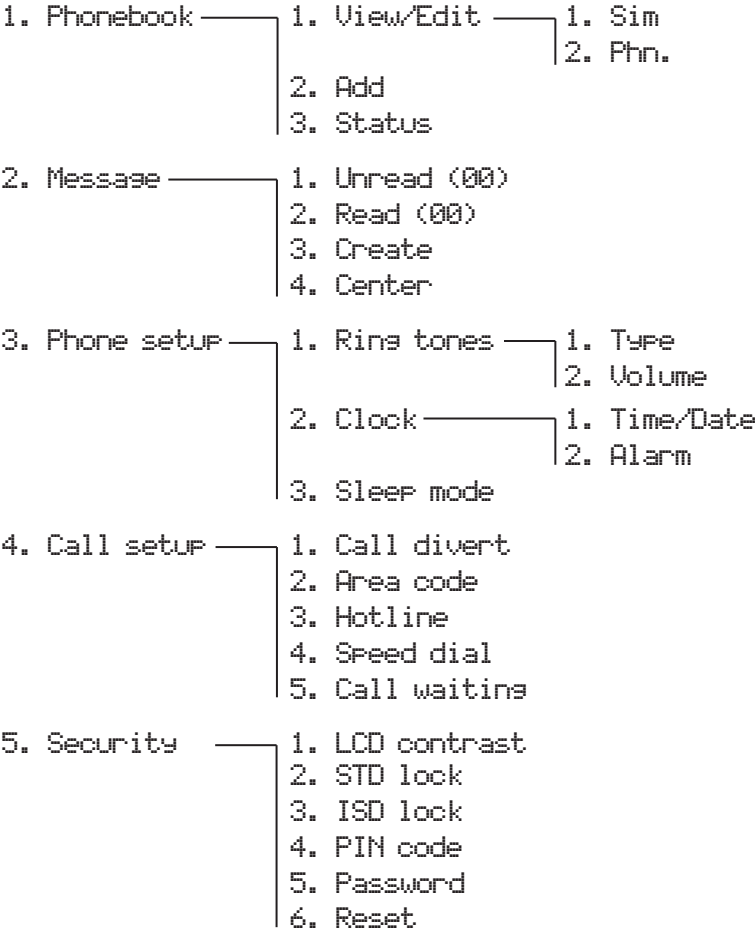

The pages that follow provide further information about each menu option.

Phonebook (option 1)

The phonebook allows you to store and use many contact numbers and corresponding names. You can choose to store contacts within the in-built memory of your phone (up to 250 contacts) or within the memory located on your SIM card (cards vary in capacity). The advantage of the latter is that your contacts can easily be moved between different phones. The phonebook allows you to quickly switch between the two storage areas and also to copy contacts between the two storage areas.

To use your phonebook to make calls

- Please follow the instructions given on page 9 of this guide.

Managing your phonebook

To view phonebook options

- 1 From standby, press the red FUNC button.
- 2 Press 1 to select the Phonebook option. The display will show:



12

To view, edit, erase or copy a contact


- 1 *View the phonebook options:* From standby, press the red FUNC button and then press 1 to select the Phonebook option.
- 2 Press 1 to select the View/Edit option.
- 3 Press either 1 to select SIM or 2 to select Phn. depending on which storage area you need to use. The first entry within the selected storage area will be displayed.
- 4 Use the ▲ or ▼ buttons to move up or down the list of contacts until the required one is displayed, then press the left softkey (Option). You will now be given four options:

- | | |
|----------------------------------|------------------------------------|
| 1. View Phn. (or View SIM) | Change to the other storage area |
| 2. Edit | Make alterations to the contact |
| 3. Erase | Remove the contact |
| 4. Copy to SIM (or Copy to Phn.) | Copy the contact to the other area |

Note: To edit a contact, press 2 and then follow the advice given in 'When entering or editing contacts' on the opposite page.

To add a contact

- 1 *View the phonebook options:* From standby, press the red **FUNC** button and then press **1** to select the **Phonebook** option.
- 2 Press **2** to select the **Add** option. The display will show:

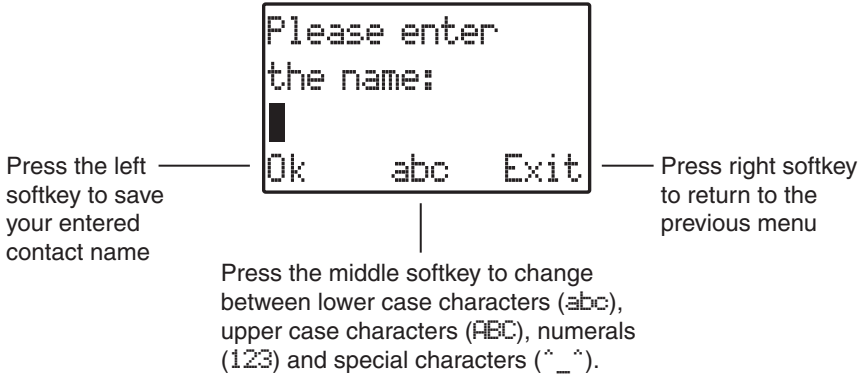

When entering or editing contacts:


- Use the main numeric keys to enter text (the middle softkey setting must be **abc** or **ABC**). Press a numeric key repeatedly to produce the appropriate character (characters appear in the order printed on the key).
 - When the required character has been entered, wait for one second before entering another character that is situated on the same key. A character on a different key can be entered immediately.
 - To enter a space, press either the **1** key or the **0** key.
 - To erase the last entered digit: Press and release the **CLEAR** button.
 - To erase all entered digits: Press and hold the **CLEAR** button.
- 3 Enter the name for your contact and press the left softkey (**Ok**).
 - 4 Enter the phone number for your contact and then press the left softkey (**Ok**). The display will show:



- 5 Press either **1** to select **SIM** or **2** to select **Phn.** (phone memory) depending on which storage area you need to use. The contact will be stored and the display will show **Ok!** to confirm.

To check storage space

- 1 *View the phonebook options:* From standby, press the red **FUNC** button and then press 1 to select the **Phonebook** option.
- 2 Press 3 to select the **Status** option. The display will show:

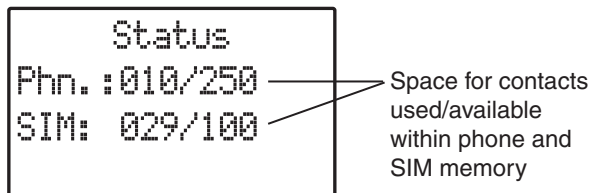


Message (option 2)

Your phone allows you to take full advantage of the text messaging services available through mobile phone technology. You can create and receive text messages up to a maximum of 160 characters per message.

Note: Text messaging requires network support - ensure that your service provider contract allows SMS (Short Message Service).

Using messaging


You can use the messaging feature at any time when you are not engaged within a call. When new messages are received, the ring tone will sound and the  character will be shown on the display adjacent to the battery symbol.

To view message options

Either:

- Press the  button,
- or
- From standby, press the red FUNC button and then press 2 to select the **Message** option.

The display will show:

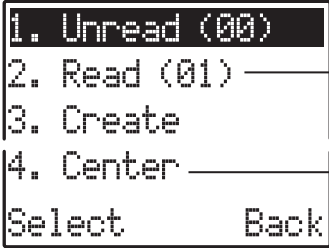

Select to see (new) received messages — 1. Unread (00)


Select to see (old) previously viewed received messages — 2. Read (01)


Select to create a new message — 3. Create

Select to view/edit your service provider message center number — 4. Center


Select Back


To view new or old messages

- 1 Press the  button and then press either 1 for **Unread** (new) messages or 2 for **Read** (old) messages. The information header for the first message in the list will be displayed:

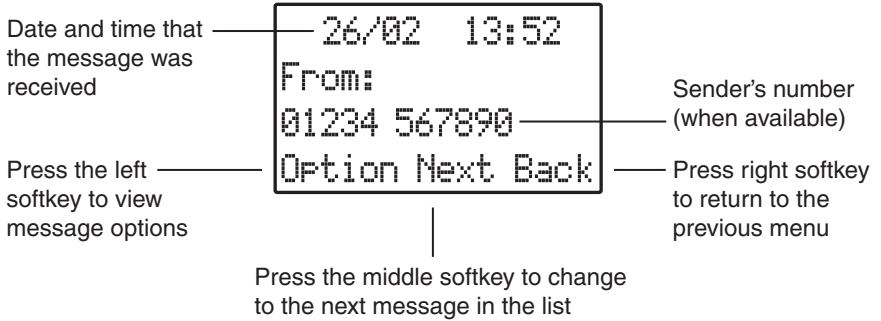

- 2 You can now either:

- Press the middle softkey (**Next**) to move to the next header,
- Press the  button to view the message belonging to the header:

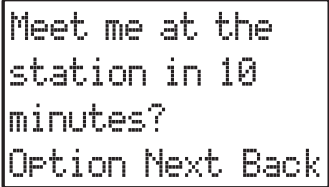

The screenshot shows a message body with the following text: "Meet me at the station in 10 minutes?" and "Option Next Back".

Annotations:

- "Press the left softkey (Option) to view options available for the message, or" points to "Option".
- "Press the right softkey (Back) to return to the previous menu." points to "Back".

16

- Press the left softkey (**Option**) to view options available for the message, or
- Press the right softkey (**Back**) to return to the previous menu.

To use message options

There are four message options: **Reply**, **Erase**, **Forward** and **Save num.**

Reply presents you with a blank message area so that you can create a response and then send it to the original sender. *For details, please see 'When creating or editing a message' on the opposite page.*

Erase removes the current message from memory.

Forward allows you to optionally edit the current message and then send it to another recipient. *For details, please see 'When creating or editing a message' on the opposite page.*

Save num. allows you to create a new phonebook entry using the number of the original sender. *For details, please see 'When entering or editing contacts' on page 13.*

To create and send a message

1 Press the  button and then press 3 for **Create**. The display will show:

Indicates the number of characters available for your message

Press the left softkey when the message is complete




Press right softkey to return to the standby screen

Press the middle softkey to change between lower case characters (abc), upper case characters (ABC), numerals (123) and special characters (^_&^).

When creating or editing a message:

- Use the main numeric keys to enter text (the middle softkey setting must be **abc** or **ABC**). Press a numeric key repeatedly to produce the appropriate character (characters appear in the order printed on the key).
 - When the required character has been entered, wait for one second before entering another character that is situated on the same key. A character on a different key can be entered immediately.
 - To enter a space, press either the 1 key or the 0 key.
 - To erase the last entered character: Press and release the **CLEAR** button.
 - To erase all entered characters: Press and hold the **CLEAR** button.
- 2 When your message is complete, press the left softkey (**Ok**). The display will show:

Press the left softkey when the message is ready to send

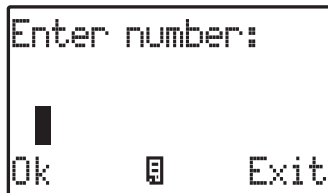

Press right softkey to return to the standby screen

Press the middle softkey to choose a contact from your phonebook

- 3 Enter a phone number for your intended recipient.
 - Press the middle softkey to use your phonebook. Select a contact and then press either the middle softkey (**Send**) to send the message immediately or the right softkey (**Ok**) to return to the addressing screen.
- 4 Press the left softkey when the message is suitably addressed. The display will show:



- 5 Press the left softkey (**Ok**) to send the message via your service provider's message center.

To view/alter the service center number

Your phone uses your provider's message service center in order to retrieve incoming text messages. Usually, the service center number is pre-configured on your SIM card and requires no alteration. However, your phone provides access to the number should it need to be altered.

Note: Do not alter the service center number unless specifically requested to do so by your service provider.


- 1 Press the button and then press 4 for **Center**. The current service center number will be displayed.
- 2 Press the left softkey (**Edit**) to alter the number.

Phone setup (option 3)

Your phone allows you to adjust numerous aspects of operation to suit your requirements.

To access the phone setup options


- 1 From standby, press the red FUNC button.
- 2 Press 3 to select the **Phone setup** option. The display will show:

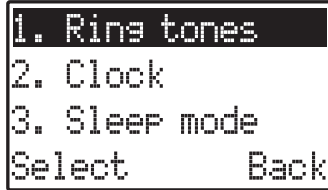

To change the ring tone type

- 1 From standby, press the red FUNC button and then press 3 to select the **Phone setup** option.
- 2 Press 1 to select the **Ring tones** option and then press 1 to select the **Type** option. The display will show:

Arrow indicates the melody sample that is currently playing

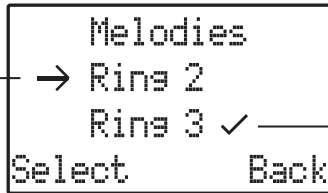


Tick indicates the melody that is currently set as the default

- 3 Use the ▲ or ▼ buttons to move up or down the list of seven melodies until the required one is played, then press the left softkey (**Select**).

To adjust the ring tone volume

- 1 From standby, press the red FUNC button and then press 3 to select the **Phone setup** option.
- 2 Press 1 to select the **Ring tones** option and then press 2 to select the **Volume** option. The display will show:

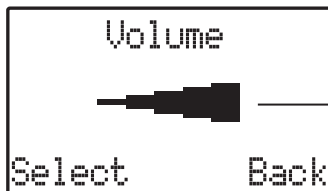

Scale indicates the current volume setting

- 3 Use the ▲ or ▼ buttons to adjust the volume setting and then press the left softkey (**Select**).

To adjust the time and date setting


- 1 From standby, press the red **FUNC** button and then press **3** to select the **Phone setup** option.
- 2 Press **2** to select the **Clock** option and then press **1** to select the **Time/Date** option. The display will show:



- 3 Adjust the time and date:
 - Use the **▲** or **▼** buttons to move the highlight bar between digits.
 - Use the numeric keypad to enter the required digit at each position.
- 4 When the settings are correct, press the left softkey (**Select**).

To set an alarm

- 1 From standby, press the red **FUNC** button and then press **3** to select the **Phone setup** option.
- 2 Press **2** to select the **Clock** option and then press **2** to select the **Alarm** option. The display will show a screen identical to the time/date set up screen shown above. Set the alarm time and date as discussed in step 3 above and then press the left softkey (**Select**). The display will show:

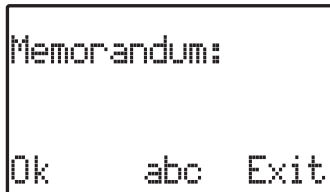

- 3 Use the numeric keypad to optionally enter an alarm message of up to 14 characters and then press the left softkey (**Ok**).

To enable/disable sleep mode

Sleep mode allows your phone to enter a low power state after a period of inactivity until a button is pressed or a call/message is received. This mode is useful for extending battery life when used away from mains power.


- 1 From standby, press the red **FUNC** button and then press **3** to select the **Phone setup** option.
- 2 Press **3** to select the **Sleep mode** option.
- 3 Use the **▲** or **▼** buttons to change the setting (**On** or **Off**) and press the left softkey (**Select**).

Call setup (option 4)

This section allows you to configure items that are specifically related to the making and receiving of calls.

To access the call setup options

- 1 From standby, press the red FUNC button.
- 2 Press 4 to select the **Phone setup** option. The display will show:

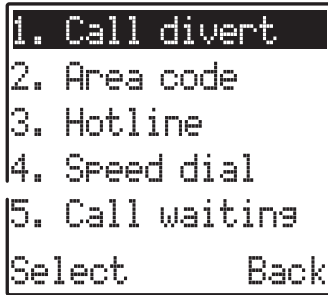

To use the call divert option

Call divert allows you to determine the conditions upon which incoming calls will be diverted to other numbers (either another phone or a voice mail box). You can set the same or different numbers for each call divert option.

Note: This function is dependent upon support from your service provider.

- 1 From standby, press the red FUNC button and then press 4 to select the **Call setup** option.

- 2 Press 1 to select the **Call divert** option. The display will provide five options:

All call	Diverts all incoming calls to the specified number.
If busy	Diverts incoming calls only when your phone is already engaged in a call.
No answer	Diverts incoming calls if you do not answer your phone.
No found	Diverts incoming calls if your phone is switched off or cannot be located within the mobile phone network.
Cancel all	Removes all call divert settings.

- 3 Select the appropriate option. When you select options 1 to 4, you will then be asked to enter the phone number to which you wish to divert calls that meet that condition. Your phone will then send the new setting to your service provider - a message will then indicate whether your settings have been accepted by the network or not.

To enter/edit an area code

An important difference between a normal landline phone and a mobile phone (whose technology your phone uses) is that you must always dial an area code, even when dialling a local number. This option allows you to store your local area code so that you can merely enter local numbers as you would with a landline phone - your phone will automatically add the prefix required by the network.

Note: The area code feature can be used in conjunction with the STD lock function discussed on page 24 to prevent national calls being made.

- 1 From standby, press the red **FUNC** button and then press 4 to select the **Call setup** option.
- 2 Press 2 to select the **Area code** option. The display will prompt you for the appropriate area code. Enter the code and press the left softkey (**Ok**).
To disable the area code option, enter no number.

To enter/edit a hotline number

The hotline option allows you to set a number that will be called whenever you pick up the receiver (or press the **HANDFREE** button) but do not dial any number. This is a useful feature to act as an emergency helpline in cases where you may be unable to dial a number.

- 1 From standby, press the red **FUNC** button and then press 4 to select the **Call setup** option.
- 2 Press 3 to select the **Hotline** option. The display will prompt you for a time delay (between 00 and 59 seconds). Press the **CLEAR** button to delete the current time setting and enter the required delay. This is the time that your phone will wait before dialling the designated number. Do not set a time that is too short otherwise unwanted dialling of the number may occur.
- 3 Press the left softkey (**Ok**) and then enter the phone number that you wish to use as your hotline. Press the left softkey (**Ok**) to enable.

To enter/edit speed dial numbers

The speed dial feature allows you to store up to ten phone numbers that you use most frequently and assign each one to a numeric key. When you then press and hold a numeric key, the assigned phone number will be dialled.


- 1 From standby, press the red **FUNC** button and then press 4 to select the **Call setup** option.
- 2 Press 4 to select the **Speed dial** option. The display will prompt you for a key. Press the numeric key to which you wish to assign a phone number and then press the left softkey (**Ok**).
- 3 Enter the phone number to be assigned to the chosen numeric key (0 to 9) and press the left softkey (**Ok**).

To configure the call waiting option

Call waiting allows the network to inform you when a second call is received and, if required, you can place the first call on hold while connecting with the second. This option allows you to enable and disable the function.

Note: This function is dependent upon support from your service provider.

- 1 From standby, press the red **FUNC** button and then press 4 to select the **Call setup** option.
- 2 Press 5 to select the **Call waiting** option. Your phone will contact the network to discover the current setting. The display will then show:

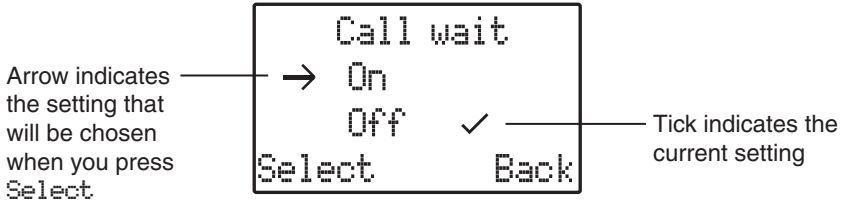


- 3 Use the ▲ or ▼ buttons to change the setting and then press the left softkey (**Select**).

Security (option 5)

This section contains options to which you may not wish all users of your phone to have access. For this reason, this section is protected by a password. The password is 000000 as standard and this can be changed using the Password option (see page 26).

To access the security options

- 1 From standby, press the red FUNC button.
- 2 Press 5 to select the Security option. You will be prompted to enter the password. Enter the password (standard password is 000000) and press the CONFIRM button. If the password is accepted, the display will show:

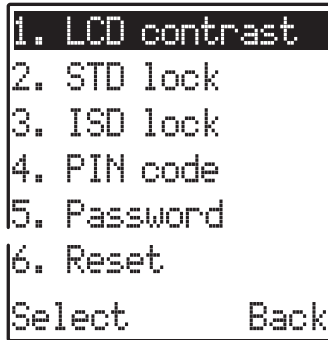

24

To adjust the display contrast

- 1 From standby, press the red FUNC button and then press 5 to select the Security option. Enter the password and press the CONFIRM button.
- 2 Press 1 to select the LCD contrast option. The display will show a graduated scale representing the current contrast setting.
- 3 Use the ▲ or ▼ buttons to adjust the contrast setting and then press the left softkey (Select).

To prevent calls to national phone numbers (STD lock)

This option allows you to prevent calls being made to national (Standard Trunk Dialed) numbers. When set on, any number that includes an area code will be blocked. This feature is linked to the Area code option (discussed on page 22) so that if local numbers are dialled, the area code will be added automatically and the call will be allowed.

- 1 From standby, press the red FUNC button and then press 5 to select the Security option. Enter the password and press the CONFIRM button.
- 2 Press 2 to select the STD lock option. The display will show the current setting.
- 3 Use the ▲ or ▼ buttons to change the setting and then press the left softkey (Select).

To prevent calls to international numbers (ISD lock)

This option allows you to prevent calls being made to international (International Standard Dialed) numbers. When set on, any number that includes a country code will be blocked.

- 1 From standby, press the red **FUNC** button and then press 5 to select the **Security** option. Enter the password and press the **CONFIRM** button.
- 2 Press 3 to select the **ISD lock** option. The display will show the current setting.
- 3 Use the ▲ or ▼ buttons to change the setting and then press the left softkey (**Select**).

To activate/deactivate your PIN code

This option determines whether your phone will request a PIN code to be entered each time it is switched on.

- 1 From standby, press the red **FUNC** button and then press 5 to select the **Security** option. Enter the password and press the **CONFIRM** button.
- 2 Press 4 to select the **PIN code** option. The display will show option 1, as either **Activate** (PIN currently disabled) or **Deactivate** (PIN currently enabled).
- 3 Press 1 and enter the current PIN code for your SIM card and press the **CONFIRM** button. If the entered PIN code is correct, the setting will be changed.

To change your PIN code

Note: You must activate your PIN code before you can change it (see above).

- 1 From standby, press the red **FUNC** button and then press 5 to select the **Security** option. Enter the password and press the **CONFIRM** button.
- 2 Press 4 to select the **PIN code** option and then press 2 to select the **Change** option.
- 3 Enter the current (old) PIN code for your SIM card and press the **CONFIRM** button.
- 4 Enter the new PIN code for your SIM card and press the **CONFIRM** button. Then, as prompted, re-enter the new PIN code and press the **CONFIRM** button. If the two new codes are identical, that number will be applied to the SIM card.

To change the access password

Use this option to change the password that gains access to the security menus of your phone.

- 1 From standby, press the red **FUNC** button and then press **5** to select the **Security** option. Enter the password and press the **CONFIRM** button.
- 2 Press **5** to select the **Password** option. The display will show the current password number.
- 3 As necessary, use the **CLEAR** button to erase the current password digits, then enter the new password and press the left softkey (**Ok**).

To reset your phone's settings

This option will return your phone to its original settings as configured during manufacture. *Note: All programmed speed dial numbers, area code and hotline numbers will be retained.*

- 1 From standby, press the red **FUNC** button and then press **5** to select the **Security** option. Enter the password and press the **CONFIRM** button.
- 2 Press **6** to select the **Reset** option. There will be a short delay and then the display will acknowledge when the reset operation is complete.

Important safety information

Operating environment

Make sure that no special regulation is in force that imposes restrictions on the use of mobile telephones. Restrictions to mobile telephones would also apply to this phone.

Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your phone.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 20 cm (6 inches) be maintained between a hand-held wireless phone and a pacemaker. The same restriction should apply to the external antenna of the phone. If you have any reason to suspect that interference is taking place, switch off the phone immediately.

Hearing aids

The phone radio signals may interfere with some hearing aids. In such event move the antenna as far away as practical or consult your hearing aid supplier.

Other medical devices

Operation of any radio transmitting equipment, including the phone, may interfere with the function of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions.

Switch off your phone in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles (e.g. electronic fuel injection systems, electronic anti-skid (anti-lock) braking systems, electronic speed control systems, airbag systems).

Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Potentially explosive atmospheres

Do not install the phone or site the antenna in any area with a potentially explosive atmosphere and obey all signs and instructions. Areas with a potentially explosive atmosphere are often but not always clearly marked. They include chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powders.

Emergency calls

Important! The phone, like any wireless phone, operates using radio signals, wireless and landline networks, as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely upon any wireless phone for essential communications (e.g. medical emergencies).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate cellular signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local cellular service providers.



Part number 362058 / rev 1.0c

Burnside Telecom Ltd

Burnside House
Isington
ALTON
GU34 4PP
United Kingdom

Tel: +44 (0)8700 762766

Fax: +44 (0)1420 520029

Email: info@burnsidetelecom.com

Web: www.burnsidetelecom.com