

In situations where the P230 phone is required to perform a dedicated task, you have the option to make it dial a single number when the handset is lifted or the **Handsfree** button is pressed. This is called *one-call dial* mode and it is password protected to prevent other users from tampering with the settings.

### Stage 1: Assign the number to dial:

- a) Press the memory "**M**" button that you wish to program.
- b) From the list of options shown on the screen, select a phonebook entry or enter a new name and number.
- c) With the name and number assigned to your **M** button, press the **M** button again.
- d) Select *Options* and turn *On* the *One press call* setting.

### Stage 2: Optionally program the banner to display on the screen:

- a) Press the **Menu** button and access: Settings > General > Edit banner.
- b) Clear the existing banner text using the clear button.  
*Tip: Press and hold the button to clear all.*
- c) Enter your text, for example "Taxi Phone" or "Call Reception".
- d) Press the **Menu** button and access: Settings > General > Change settings. For the *Idle display* option, select *Banner*. Press the **Menu** button and you will now see the idle screen with your banner text.

### Stage 3: Lock the phone:

- a) Press the **Menu** button and access: Settings > Security > Restrict to M keys.
- b) Enter the pin number which is the last four digits of the IMEI number (printed on the underside of the unit and also shown in the menu *Status* screen).

### Stage 4: Test for correct operation

- a) Lift the handset or press the **Handsfree** button and note that the phone dials the appropriate number.

### Troubleshooting

If the phone does not call the number, check that one, and only one memory button is programmed. If a number is stored in a second location, then the one-call mode will not operate.

### How to unlock

Press the **Menu** button and enter the last four digits of the IMEI number.